

## 1. INTRODUCTION

### 1.1 Compatibility:

FASST 2.4G Air Systems (7CH Mode/Multi Mode): 6EX, 7C, TM-7, TM-8, T8FG, T10C, TM-10, T10CG, 14SG, T12Z, T12FG, TM-14, T14MZ, etc.

FASST 2.4G Surface Systems (C1 Mode): 3PK, 4PK, etc.

### 1.2 Specifications:

Operating Voltage Range:	3.5V~ 8.4V
Dimension:	35.5X23.3X12.7mm
Weight:	7.8g
Latency:	14ms (FS) 7ms (HS)



### 1.3 Features:

- 1) Compatible with FASST 2.4G: Air Systems (7CH Mode/Multi Mode) & Surface Systems (C1 Mode) ;
- 2) Two selectable failsafe setting options;
- 3) Improve capability of anti-interference ;
- 4) Firmware upgradable

## 2. SETUP( BIND PROCEDURE/ SETTING FAILSAFE/LED STATUS)

### 2.1 Bind procedure:

Turn on the transmitter, connect the battery to the receiver while pressing receiver's F/S button. After the RED LED is off and GREEN LED is solid, the binding process is completed and the receiver is operating normally.

### 2.2 Setting failsafe:

R6008HV support two selectable failsafe setting options, either use native failsafe position preset on the transmitter side, or set failsafe on

#### 2.2.1 Use native failsafe position preset on the transmitter side:

If not disabling failsafe on the transmitter side, R6008HV will use native failsafe position preset on the transmitter side.

#### 2.2.2 Set failsafe on :

R6008HV supports failsafe function for all channels. Follow the steps below to set failsafe on R6008HV :

- 1) Bind the receiver first, and disable failsafe on the transmitter side;
- 2) Set all transmitter controls to the desired failsafe position;
- 3) Press briefly the F/S button of the receiver, the GREEN LED of the receiver will flash twice, indicating the failsafe is set up successfully.

If you do not need the failsafe function any more, just re-bind the receiver to set default failsafe mode.

**Hint: If not disabling failsafe on the transmitter side, R6008HV will use native failsafe position preset on the transmitter side.**