



Instruction Manual Book

Item code: BH166.

FAIREY ALBACORE

ALL Balsa - Ply Wood Construction.
Covered in a Heat-shrink Film with Printed.

Glow and EP

95% PRE BUILT
ARF
ALMOST READY TO FLY



95% ALMOST READY TO FLY

SPECIFICATION:

- Wingspan: 1,693mm (66.65in).
- Length: 1,400mm (55.12in).
- Weight: 4.5kg (9.9 lbs).
- Wing area: 75.74 dm².
- Wing loading: 59.41g/dm².
- Wing type: Naca Airfoil.
- Servo mount: 42mm x 21mm.
- Gear type: Aluminium Hi-grade for main gear and spring wire for tail gear (included).
- Spinner: 70mm.

Parts listing required (not included):

- Radio: 05 channels.
- Servo: 07 servos.
- Engine: 65 - 75 2 stroke ; 15 cc gas.
- Motor: Brushless outrunner 1200-2200W, 650KV.
- Propeller: Suit with your engine.

Recommended Motor and Battery set up (not included):

- Motor: RIMFIRE.60.
- Lipo cell: 6 cells 4,000-5,000mAh.
- Receiver battery: 6V/ 1200-2000mAh NiMH.
- ESC: 80A.

TABLE OF CONTENTS

▶ Warning	3	▶ Installing the throttle	11
▶ Warranty	3	▶ Installing the fuselage servos	12
▶ Disclaimer	3	▶ Cowling	13
▶ Suggestion	3	▶ Installing horizontal stabilizer	14
▶ Note	3	▶ Rudder installation	15
▶ Safety precaution	4	▶ Installing main gear	16
▶ Tools & supplies needed.	4	▶ Mounting the tail wheel bracket	18
▶ Parts listing (not included).	4	▶ Installing plastic bomb fuselage	19
▶ Installing the ailerons	6	▶ Installing the switch, receiver and battery.	19
▶ Installing the ailerons servos	6	▶ Installing cockpit fuselage.	20
▶ Installing the control horns and linkages	7	▶ Wing attachment, wing strut	21
▶ Installing the engine mount.	8	▶ Installing the spinner, propeller.	23
▶ Installing the electric motor (ep version).	8	▶ Balancing	24
▶ Installing the engine	10	▶ Control throws	24
▶ Installing the stopper assembly	10	▶ Pre-flight check.	24

Academy of Model Aeronautics: If you are not already a member of the AMA, please join! The AMA is the governing body of model aviation and membership provides liability insurance coverage, protects modelers' rights and interests and is required to fly at most R/C sites.

Academy of Model Aeronautics
5151 East Memorial Drive Muncie IN 47302-9252

Tele. (800) 435-9262
Fax. (765) 741-0057

Or via the Internet at: <http://www.modelaircraft.org>



This instruction manual is designed to help you build a great flying aeroplane. Please read this manual thoroughly before starting assembly. Use the parts listing below to identify all parts.

WARNING

Please be aware that this aeroplane is not a toy and if assembled or used incorrectly it is capable of causing injury to people or property. WHEN YOU FLY THIS AEROPLANE YOU ASSUME ALL RISK & RESPONSIBILITY.

If you are inexperienced with basic R/C flight we strongly recommend you contact your R/C supplier and join your local R/C Model Flying Club. R/C Model Flying Clubs offer a variety of training procedures designed to help the new pilot on his way to successful R/C flight. They will also be able to advise on any insurance and safety regulations that may apply.

WARRANTY

Black Horse Model guarantees the component parts in this kit to be free from defects in both material and workmanship at the date of purchase by the purchaser.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the Product.

This warranty does not cover damage due to improper installation, operation, maintenance, or attempted repair by anyone other than Black Horse Model.

Return only the component part that is defective in materials or workmanship. Please pack the unit carefully and insure it, as this warranty does not cover loss or damage in transit.

DISCLAIMER

Read this disclaimer carefully before using this product. Please strictly follow the instruction manual to assemble and use this.

In that Black Horse Model has no control over the final assembly or material used for final assembly, Black Horse Model is not responsible for loss of use, or other incidental or consequential damages.

Furthermore, Black Horse Model cannot be held liable for personal injury or property damage caused by the use or misuse of Black Horse Model products. By the act of using the user-assembled products, the user accepts all resulting liability.

SUGGESTION

To avoid scratching your new airplane, do not unwrap the pieces until they are needed for assembly. Cover your workbench with an old towel or brown paper, both to protect the aircraft and to protect the table. Keep a couple of jars or bowls handy to hold the small parts after you open the bag.

NOTE

Please trial fit all the parts. Make sure you have the correct parts and that they fit and are aligned properly before gluing! This will assure proper assembly. This kit is hand made from natural materials, every plane is unique

and minor adjustments may have to be made. However, you should find the fit superior and assembly simple.

The painted and plastic parts used in this kit are fuel proof. However, they are not tolerant of many harsh chemicals including the following: paint thinner, C/A glue accelerator, C/A glue debonder and acetone. Do not let these chemicals come in contact with the colors on the covering and the plastic parts.

Caution: This model is not a toy!

If you are a beginner to this type of powered model, please ask an experienced model flyer for help and support. If you attempt to operate the model without

knowing what you are doing you could easily injure yourself or somebody else. Please keep your safety and well-being in mind at all times.

Important: Before you start construction

Even if you have built a large number of RC models please read right through these instructions and check all the kit components against the parts list. We have taken great trouble to keep construction as simple as possible, without making any compromises in the area of safety.

Note regarding the film covering

Minor creases or bubbles may develop in the film covering due to major fluctuations in weather conditions (temperature, humidity etc.); in rare cases you may even find a slight warp in a component. These minor faults are in the nature of film-covered built-up wooden structures, and can easily be corrected using a heat gun, as commonly used for modelling.

Creases: Blow warm air over the area and rub down with a soft cloth.

Wing wrap: Hold the panel twisted gently in the opposite direction to the wrap, and apply warm air to remove the creases from the covering.

Caution! do not heat the film more than is absolutely necessary. If the air or the iron is too hot, the film may melt and holes may be formed.

This model is highly pre-fabricated and can be built in a very short time. However, the work which you have to carry out is important and must be done carefully. The model will only be strong and fly well if you complete your tasks competently - so please work slowly and accurately.

When self-tapping screws have to be screwed into wood, apply a little white glue to prevent them shaking loose: just squirt white glue into the hole and fit the screw

 
SAFETY PRECAUTION:

- This model is not a toy and pilots must be over the age of 14.
- Be sure that no other flyers are using your radio frequency.
- Do not smoke near fuel.
- Store fuel in a cool, dry place, away from children and pets.
- Wear safety glasses.
- The glow plug clip must be securely attached to the glow plug.
- Do not flip the propeller with your fingers.
- Keep loose clothing and wires away from the propeller.
- Do not start the engine if people are near. Do not stand in line with the side of the propeller.
- Make engine adjustments from behind the propeller only. Do not reach around the spinning propeller.
- Moisture causes damage to electronics. Avoid water exposure to all equipment not specifically designed and protected for this purpose.

TOOLS & SUPPLIES NEEDED.



Medium C/A glue



Straight edge ruler.



EPOXY A
EPOXY B
30 minute epoxy.
5 minute epoxy.



Hex Wrench.



Hand or electric drill.



Threadlocker (screw cement).



2 bender plier



 
Screw driver

Some more tools.

- Assorted drill bits.
- Masking tape.
- Paper towels.
- Rubbing alcohol
- 90° square or builder's triangle.




Wire cutters.










Modeling knife.





 






PARTS LISTING (NOT INCLUDED).

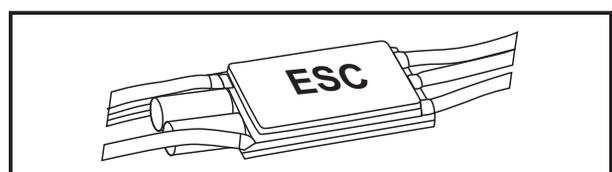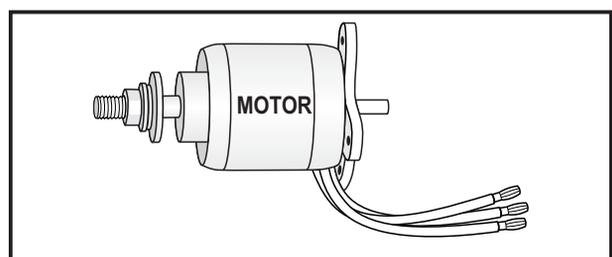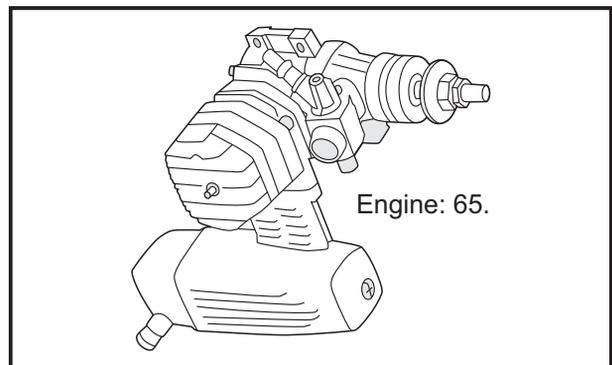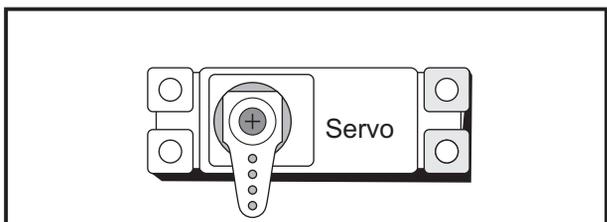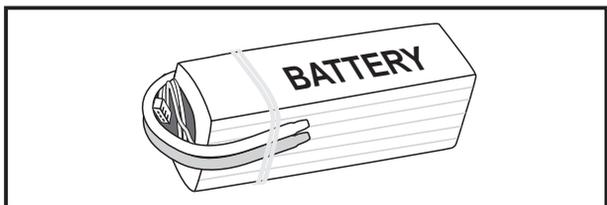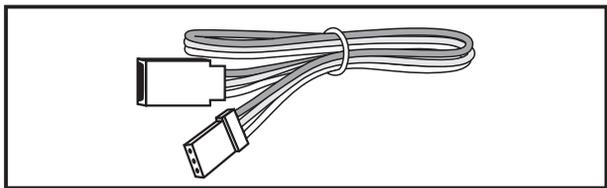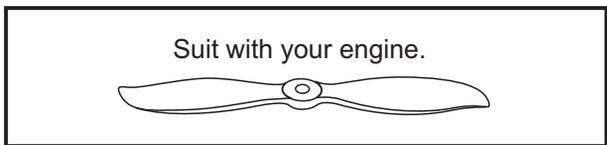





- ① : Fuselage.
- ② : Wing panel (2a, 2b, 2c, 2d).
- ③ : Horizontal stabilizer.
- ④ : Rudder.
- ⑤ : Aluminium wing dihedral brace.
- ⑥ : Cowling.
- ⑦ : Spinner.
- ⑧ : Cockpit fuselage (8a1,8a2: Canopy)
8b: Pilot; 8c: Top hatch fuselage).
- ⑨ : Fuel Tank (9a: Clunk;
9b: Stopper (three line).
- ⑩ : Tail gear set.
- ⑪ : Plastic bomb fuselage.
- ⑫ : Wing struts (12a, 12b).

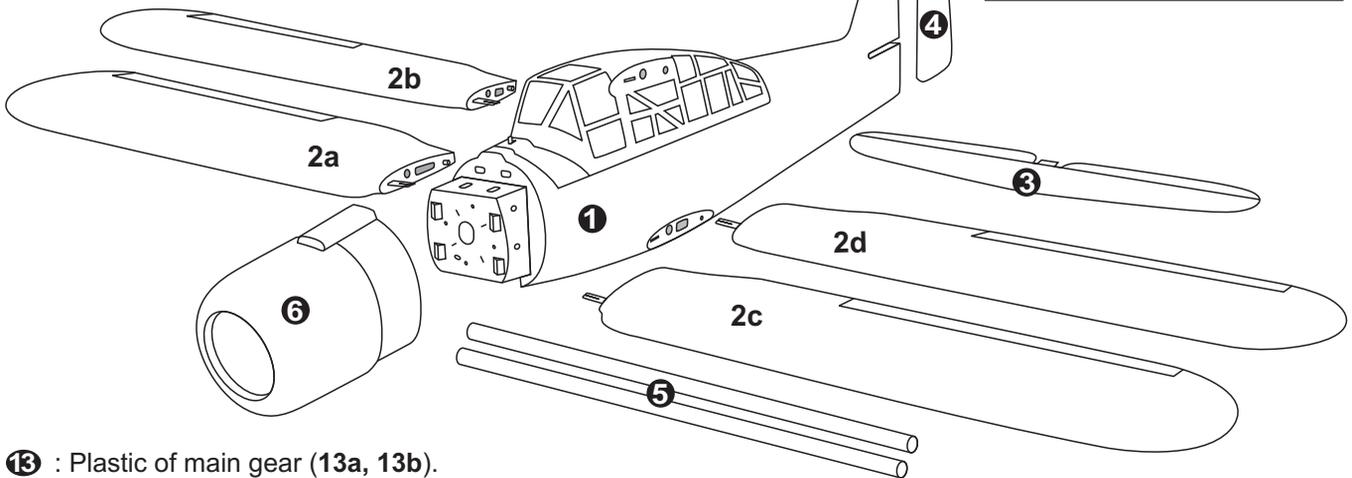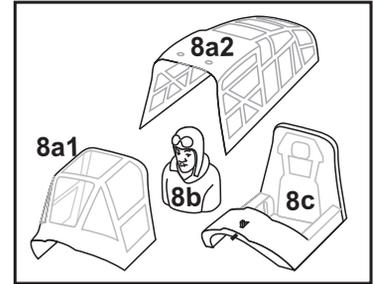


- ⑬ : Plastic of main gear (13a, 13b).
- ⑭ : Aluminium landing gear.
- ⑮ : Wheels.
- ⑯ : Plastic - engine mount (16a, 16b).
- ⑰ : Wood - motor mount.

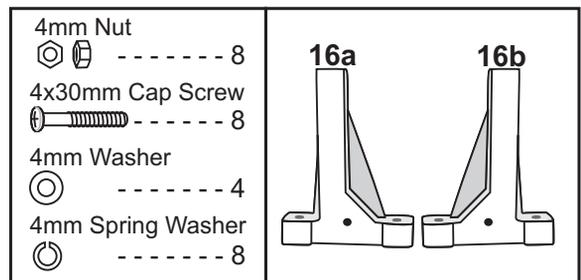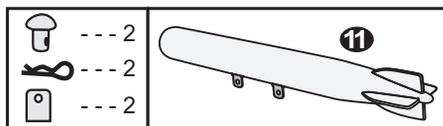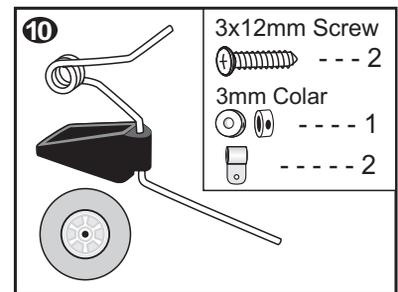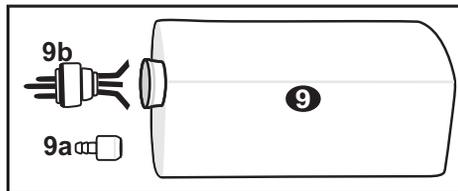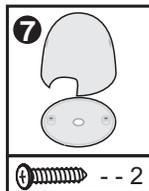


- 2x10mm Screw --- 16
- 3x12mm Screw --- 4
- M2 --- 7
- 2mm Nut --- 7
- 100mm Push rod --- 5
- 800mm Push rod --- 3
- Flaslink --- 7
- Horn --- 7
- 1
- 500mm Pushrod wire --- 1
- Connector --- 1

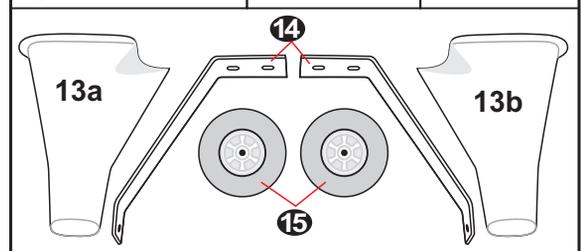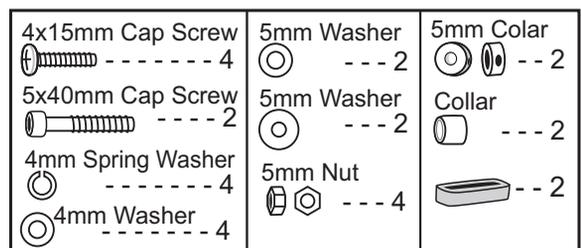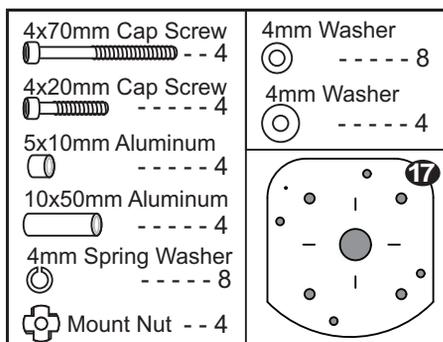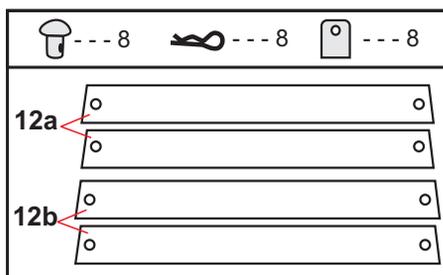


1. INSTALLING THE AILERONS

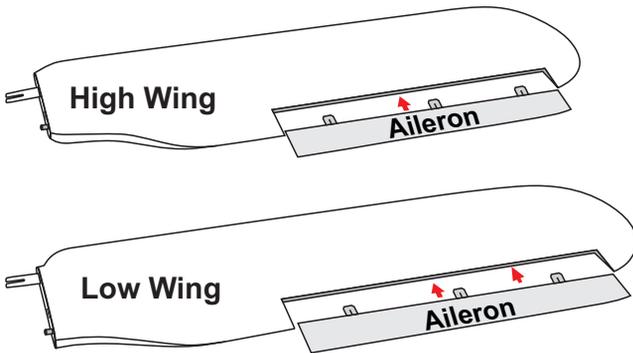

* Test fit the ailerons to the wing with the hinges. If the hinges don't remain centered, stick a pin through the middle of the hinge to hold it in position.

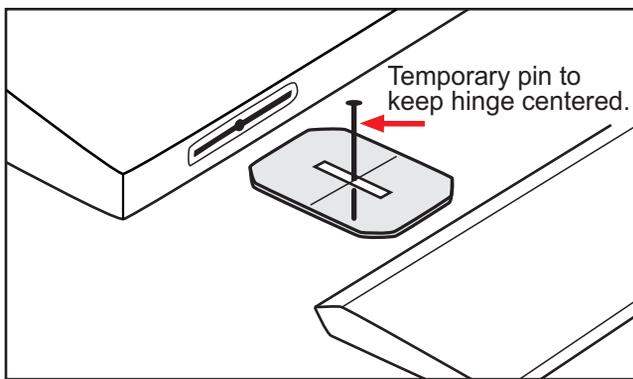


* Apply drops of thin CA to the top and bottom of each hinge. Do not use CA accelerator. After the CA has fully hardened, test the hinges by pulling on the aileron.

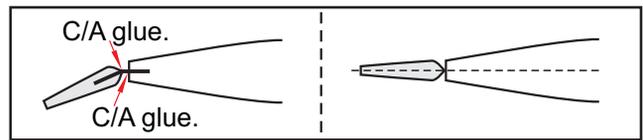

* Secure nylon hinges with instant glue, being careful not to glue the wing and aileron together.
* Align the center line of main wing with aileron.

WARNING Make certain the hinges are adequately secured with glue. If they come loose in flight accidents may result.

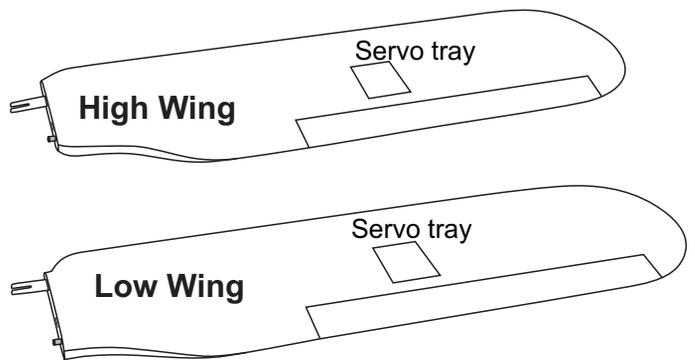

Repeat the procedure to install the other wing.

2. INSTALLING THE AILERON SERVOS


1. Install the rubber grommets and brass eyelets on to the aileron servos.


2. Using a modeling knife, remove the covering from over the pre-cut servo arm exit hole on the aileron servo tray / hatch. This hole will allow the servo arm to pass through when installing the aileron pushrods.

3. Place the servo into the servo tray. Center the servo within the tray and drill 1.5mm pilot holes through the block of wood for each of the four mounting screws provided with the servo.



4. Using the thread as a guide and using masking tape, tape the servo lead to the end of the thread: carefully pull the thread out. When you have pulled the servo lead out, remove the masking tape and the servo lead from the thread.

5. Place the servo into the servo tray/ hatch into the servo box on the bottom of the wing and drill 1.5mm pilot holes through the tray and servo box for each of the four mounting screws. Secure the servo tray in place using the mounting screws provided.


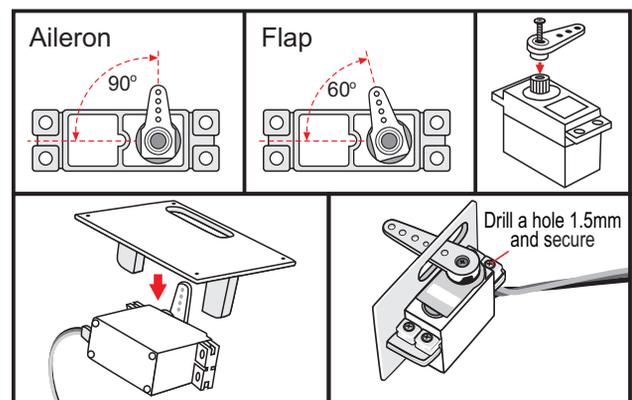


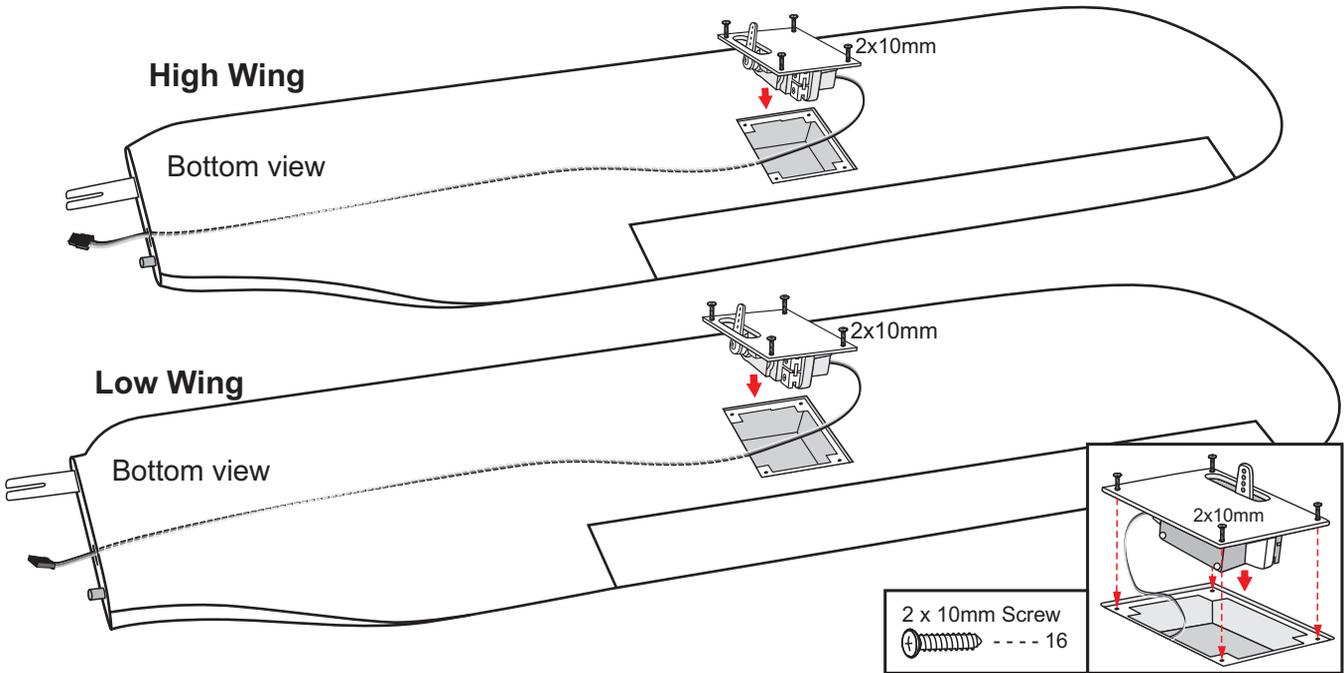

3. INSTALLING THE CONTROL HORNS, LINKAGES

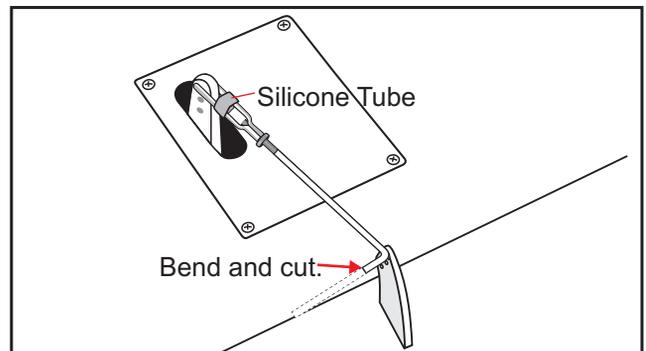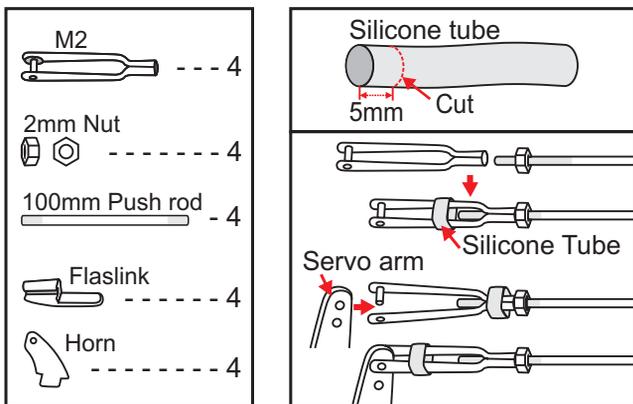

Insert the 90 degree bend down through the hole in the control horn. Install one nylon snap keeper over the wire to secure it to the control horn. Install the control horn retaining screw and remove the masking tape from the aileron.

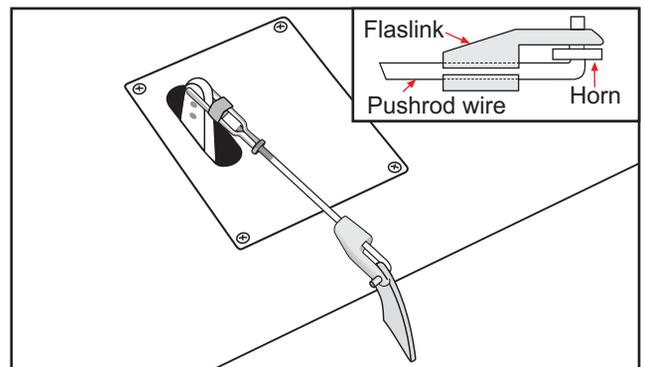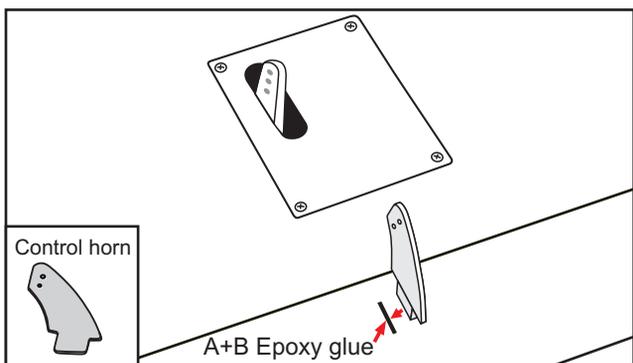


- * Attach the clevis to the outer hole in the servo arm.
- * Using pliers, carefully make a 90 degree bend down at the mark made. Cut off the excess wire, leaving about 6mm beyond the bend.


After both linkages are completed. connect both of the aileron servo loads using a Y-harness you have purchased.

Repeat the procedure to install the opposite gear.


High Wing

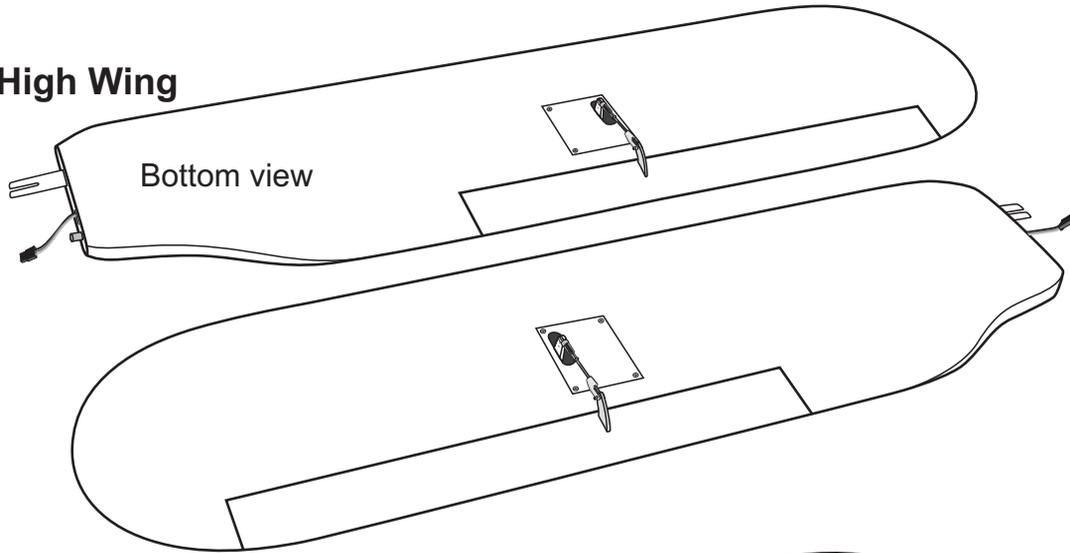

Low Wing


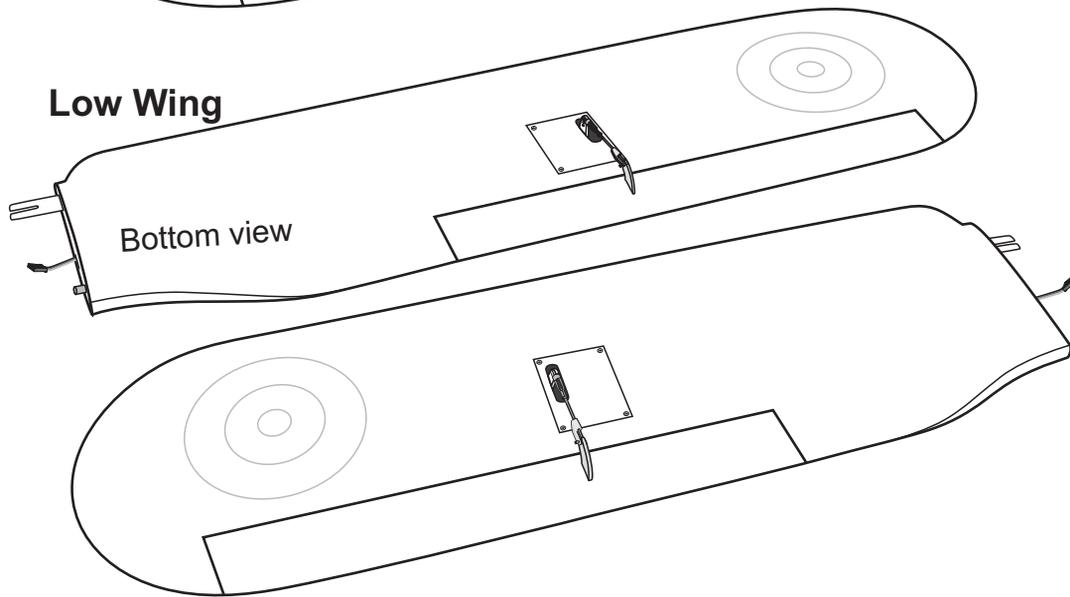





4. INSTALLING THE ENGINE MOUNT

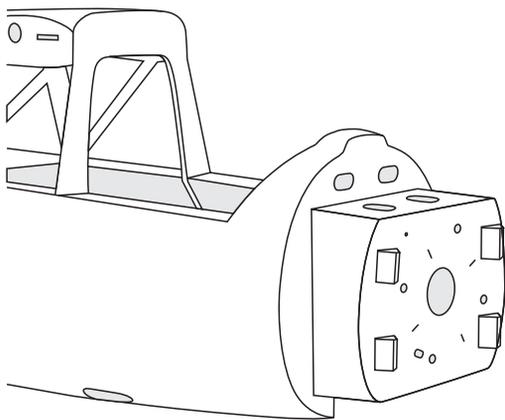

There are two options:
1. Electric motor
2. Engine mount.

 
OPTION 1: ELECTRIC MOTOR

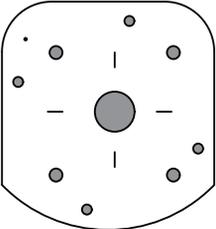4x70mm Cap Screw  --- 4	5x5mm Aluminum  ----- 4
4x20mm Cap Screw  ----- 4	10x50mm Aluminum  ----- 4
4mm Washer  ----- 8	
4mm Washer  ----- 4	
4mm Spring Washer  ----- 8	
Mount Nut  ----- 4	

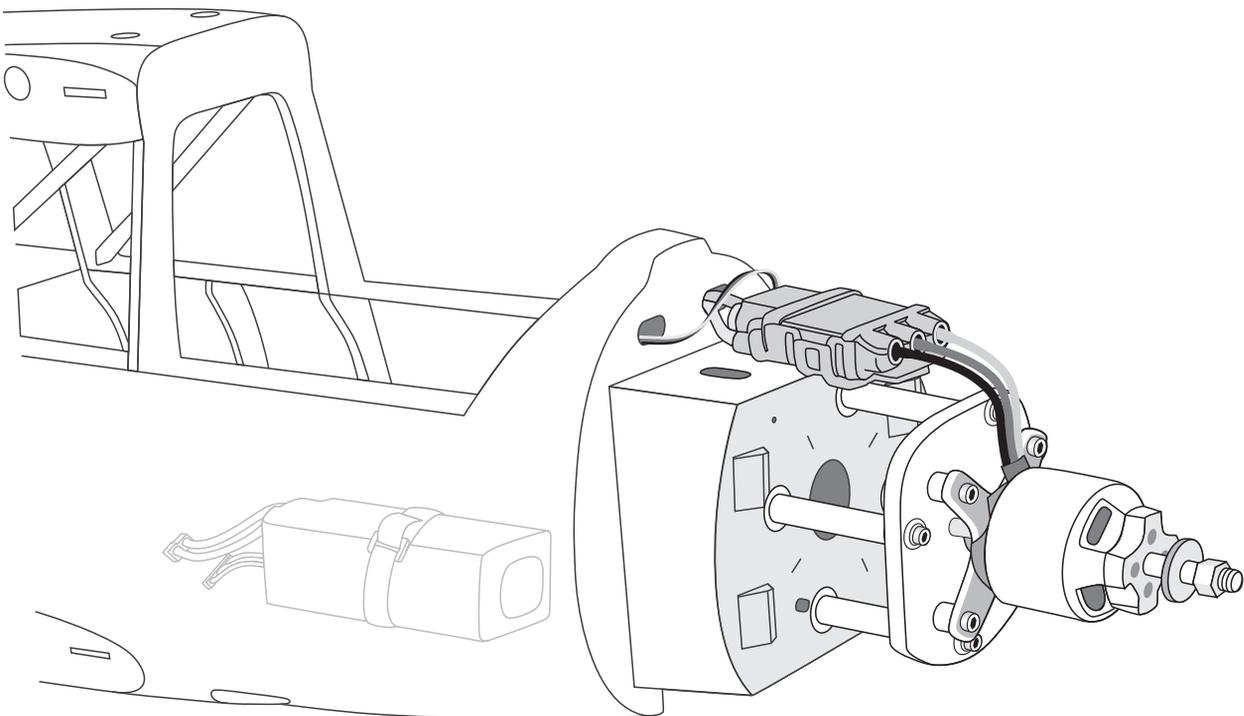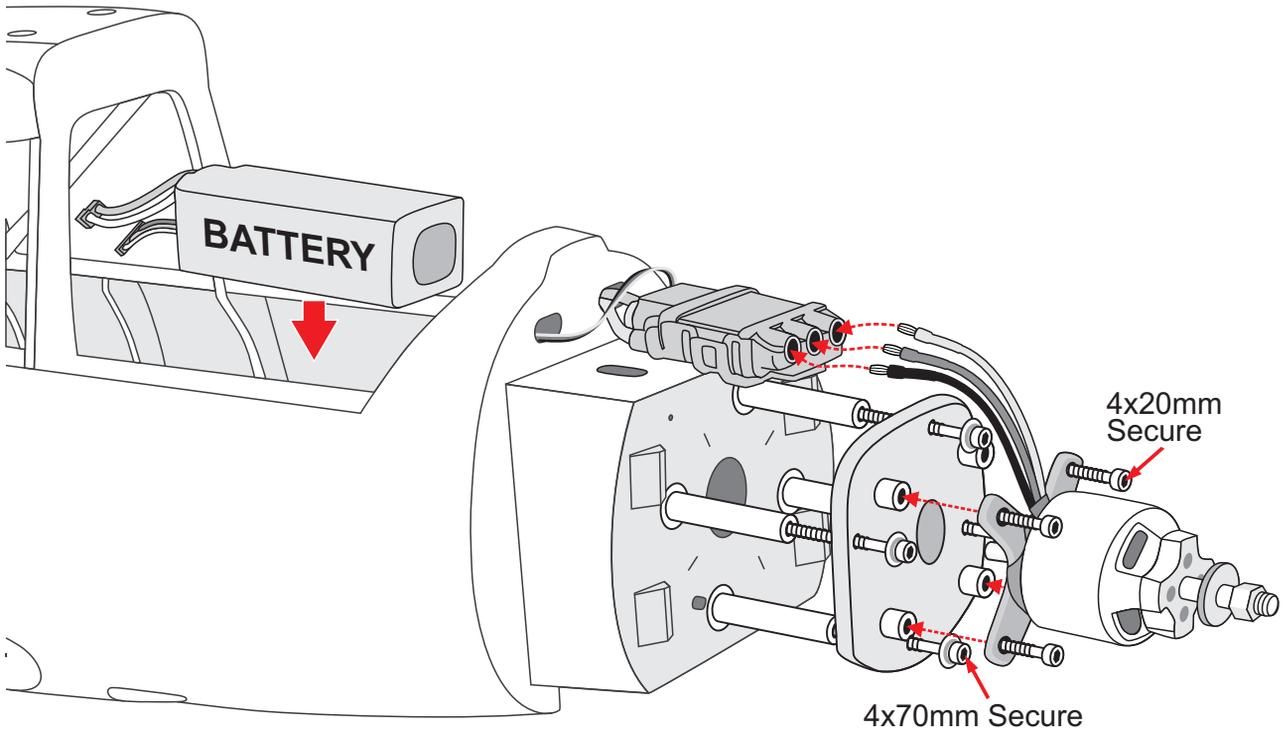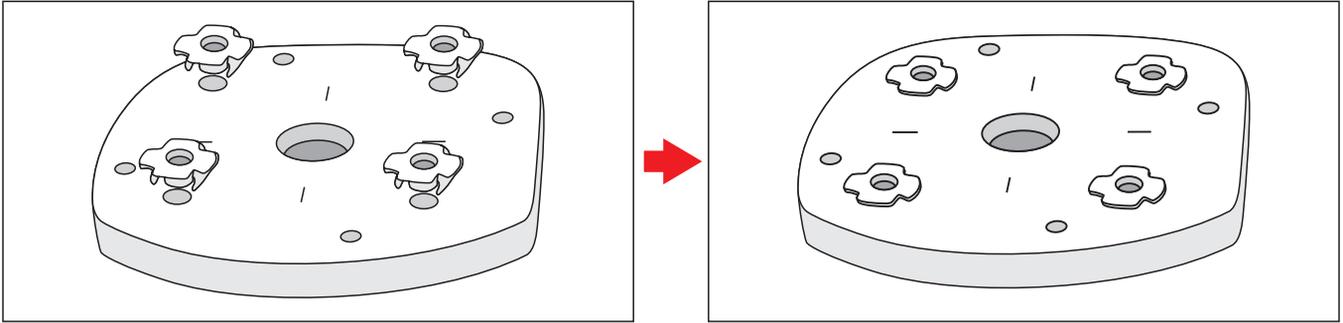


OPTION 2: ENGINE INSTALLATION


Installing the engine mount, fuel tank

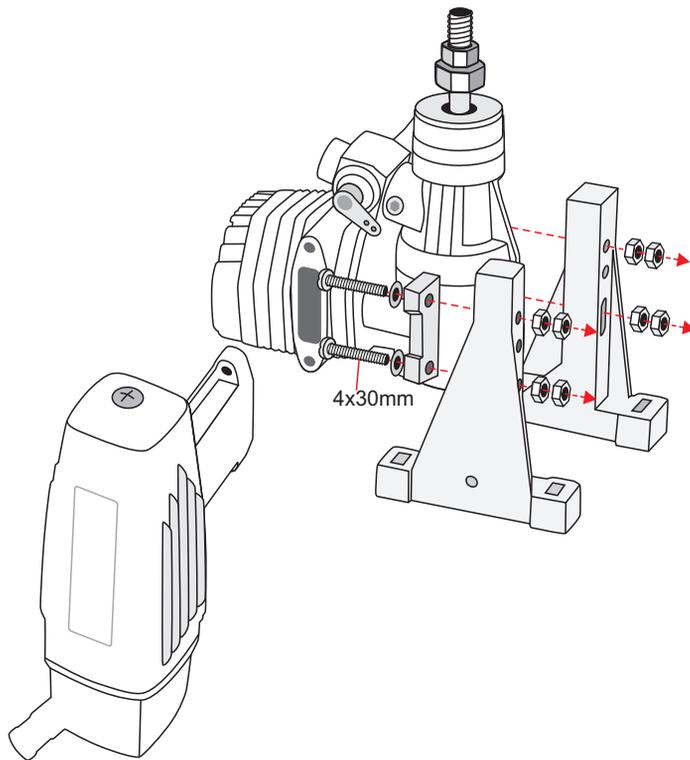

4mm Nut 	----- 8
4x30mm Cap Screw 	----- 8
4mm Washer 	----- 4
4mm Spring Washer 	----- 8

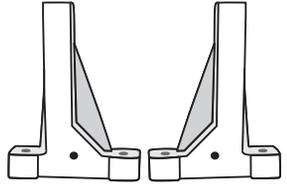

Engine mount

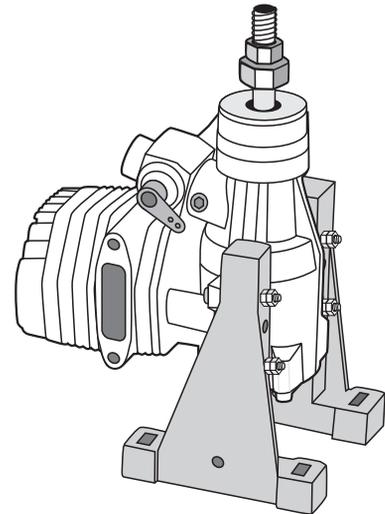

INSTALLING THE STOPPER ASSEMBLY


1) The stopper has been pre-assembled at the factory.

2) Using a modeling knife, cut one length of silicon fuel line (the length of silicon fuel line is calculated by how the weighted clunk should rest about 8mm away from the rear of the tank and move freely inside the tank). Connect one end of the line to the weighted clunk and the other end to the nylon pick up tube in the stopper.

3) Carefully bend the second nylon tube up at a 45 degree angle (using a cigarette lighter). This tube will be the vent tube to the muffler.

4) Carefully bend the third nylon tube down at a 45 degree angle (using a cigarette lighter). This tube will be vent tube to the fueling valve.


When the stopper assembly is installed in the tank, the top of the vent tube should rest just below the top surface of the tank. It should not touch the top of the tank.

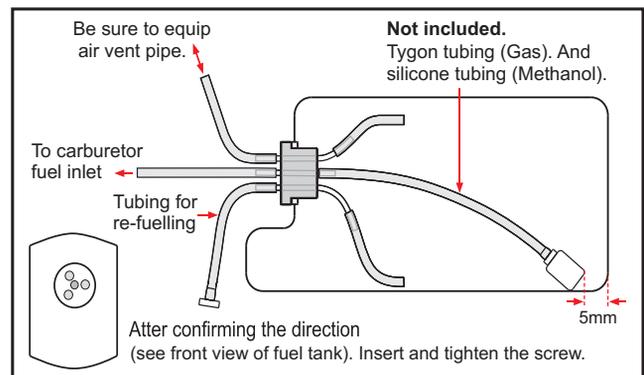

5) Test fit the stopper assembly into the tank. It may be necessary to remove some of the flashing around the tank opening using a modeling knife. If flashing is present, make sure none of it falls into the tank.

6) When satisfied with the alignment of the stopper assembly tighten the 3mm x 20mm machine screw until the rubber stopper expands and seals the tank opening. Do not over tighten the assembly as this could cause the tank to split.




7) Using a modeling knife, cut 3 lengths of fuel line 150mm long. Connect 2 lines to the 2 vent tubes and 1 line to the fuel pickup tube in the stopper.

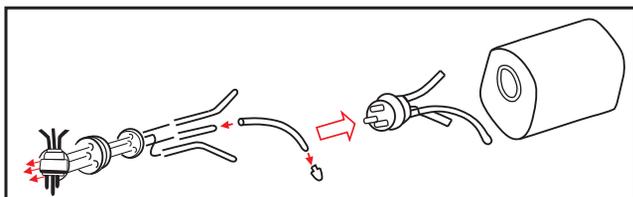


8) Feed three lines through the fuel tank compartment and through the pre-drilled hole in the firewall. Pull the lines out from behind the engine, while guiding the fuel tank into place. Push the fuel tank as far forward as possible, the front of the tank should just about touch the back of the firewall. Blow through one of the lines to ensure the fuel lines have not become kinked inside the fuel tank compartment. Air should flow through easily.

9) To secure the fuel tank in place, apply a bead of silicon sealer to the forward area of the tank, where it exits the fuselage behind the engine mounting box and to the rear of the tank at the forward bulkhead.




Do not secure the tank into place permanently until after balancing the airplane. You may need to remove the tank to mount the battery in the fuel tank compartment.

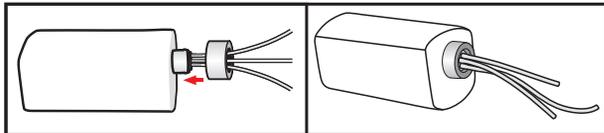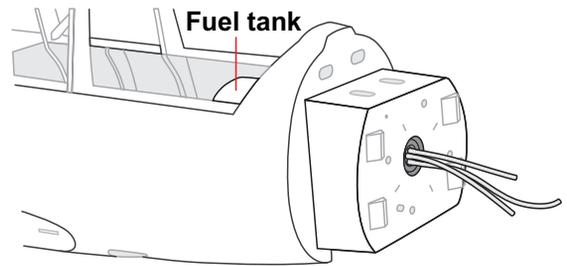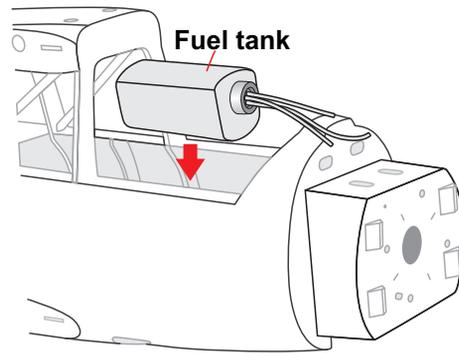

INSTALLING THE THROTTLE PUSHROD

 

* Locate the long piece of wire used for the throttle pushrod. One end of the wire has been pre-bend in to a "Z" bend at the factory. This "Z" bend should be inserted into the throttle arm of the engine when the engine is fitted onto the engine mount. Fit the engine to the engine mount using the screws provided.

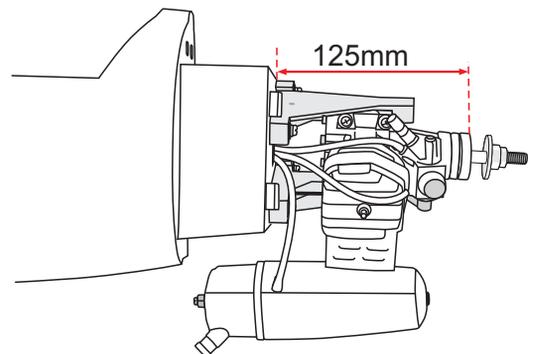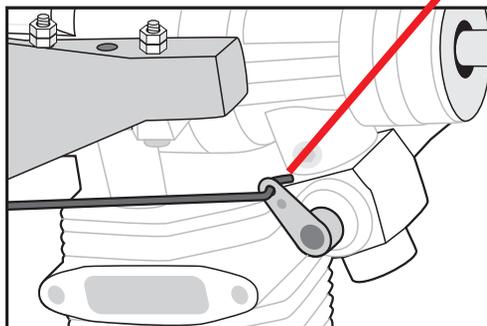
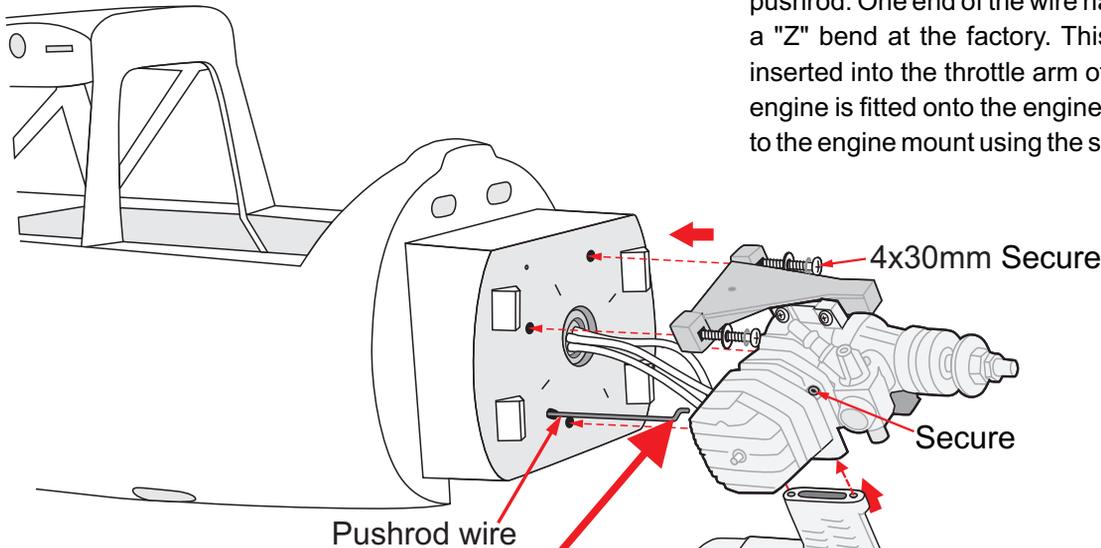


5. INSTALLING THE FUSELAGE SERVOS

1) Install the rubber grommets and brass collets into the elevator, rudder and throttle servos. Test fit the servos into the servo tray. Trim the tray if necessary to fit your servos.

2) Mount the servo to the tray using the mounting screws provided with your radio system.


Fuselage bottom side

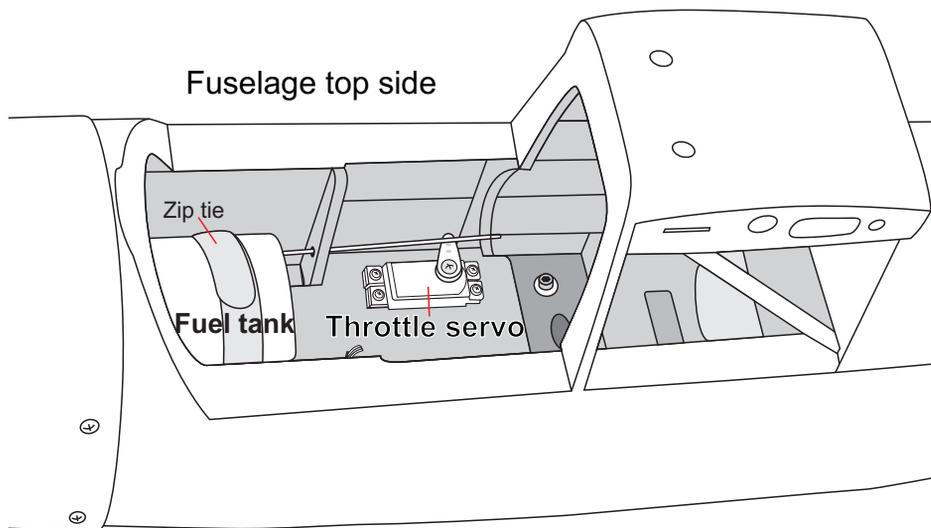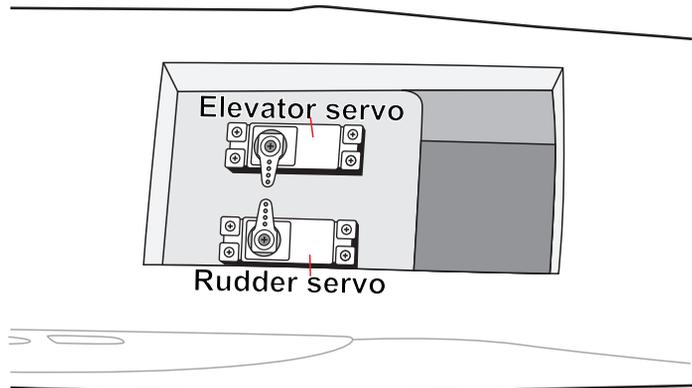

INSTALLING THE THROTTLE PUSHROD

* Install one adjustable metal connector through the third hole out from the center of one servo arm, enlarge the hole in the servo arm using a 2mm drill bit to accommodate the servo connector. Remove the excess material from the arm.

After installing the adjustable metal connector apply a small drop of thin C/A to the bottom nut. This will prevent the connector from loosening *during flight*.

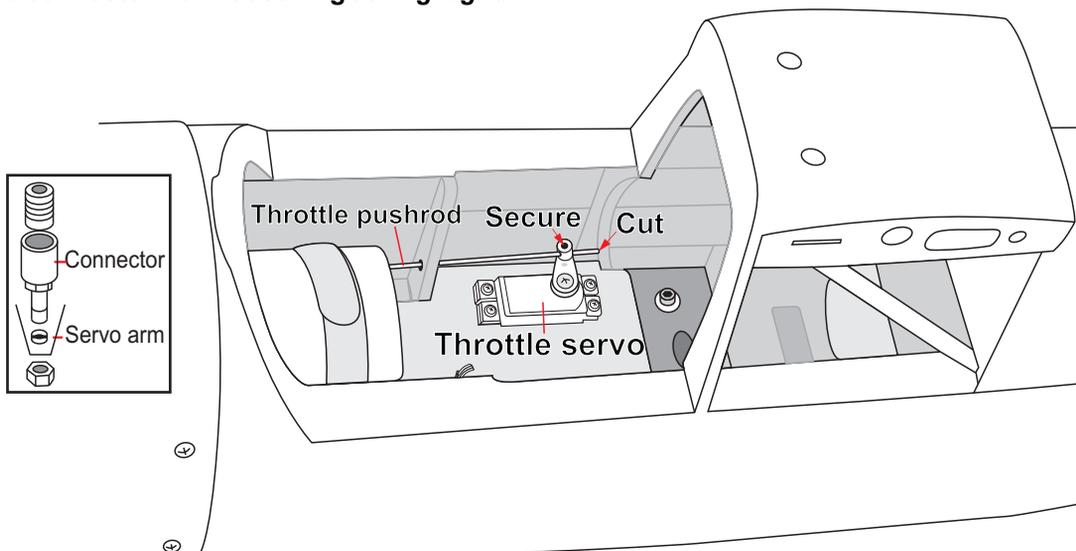


6. COWLING

- 1) Slide the fiberglass cowl over the engine and line up the back edge of the cowl with the marks you made on the fuselage.
- 2) While keeping the back edge of the cowl flush with the marks, align the front of the cowl with the crankshaft of the engine. The front of the cowl should be positioned so the crankshaft is in **nearly** the middle of the cowl opening. Hold the cowl firmly in place using pieces of masking tape.



3) Slide the cowl back over the engine and secure it in place using four wood screws. See picture below.

4) Install the muffler and muffler extension onto the engine and make the cutout in the cowl for muffler clearance. Connect the fuel and pressure lines to the carburetor, muffler and fuel filler valve.


Drill four 2.5mm pilot holes through both the cowl and the side edges of the firewall. Using a 3mm drill bit, enlarge the four holes in the cowling.

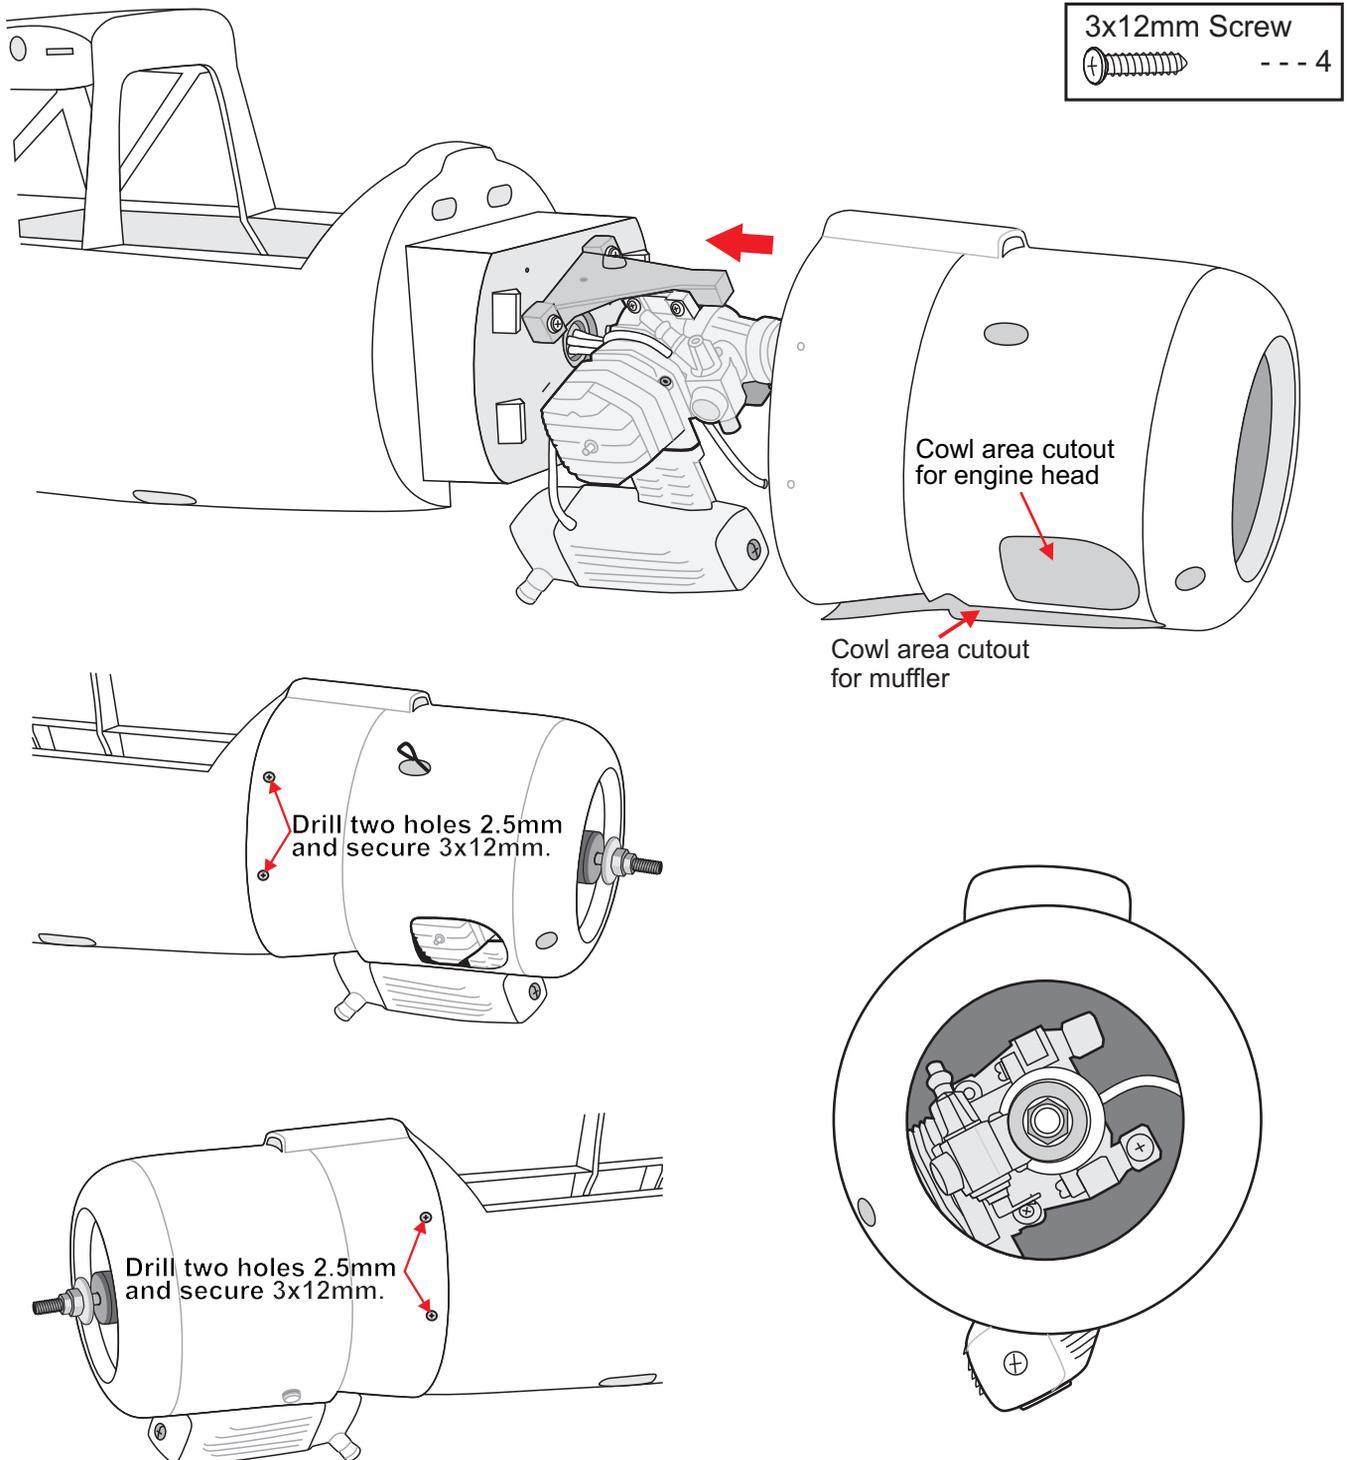



7. INSTALLING HORIZONTAL STABILIZER

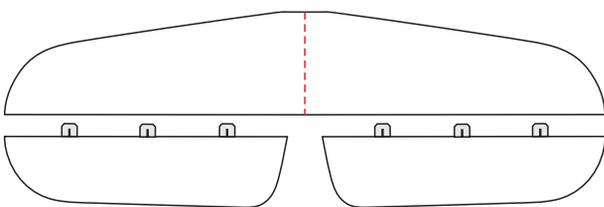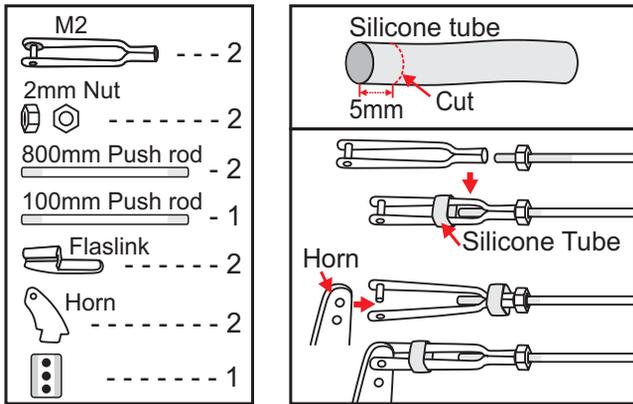



1) Using a modeling knife, carefully remove the film covering from the tail slots at the rear of the fuselage. Make sure that you do not remove any wood from the slots as this will affect the alignment of the tail.

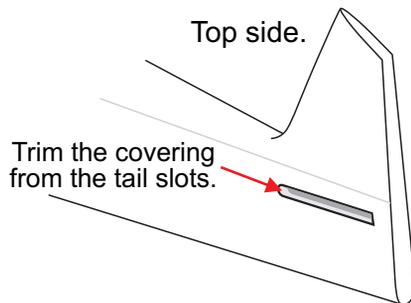

 2) Draw a center line onto the horizontal stabilizer. Then put the horizontal into the fuselage.

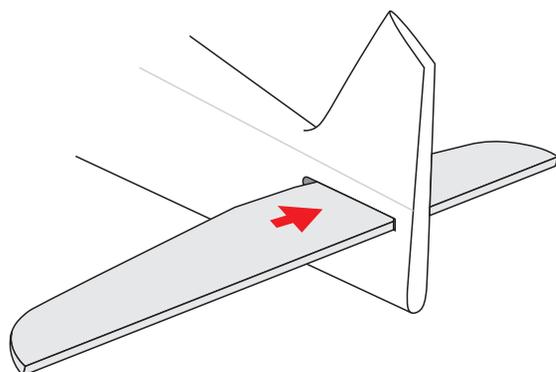


3) Check the fit of the horizontal stabilizer in its slot. Make sure the horizontal stabilizer is square and centered to the fuselage by taking measurements, but don't glue anything yet.

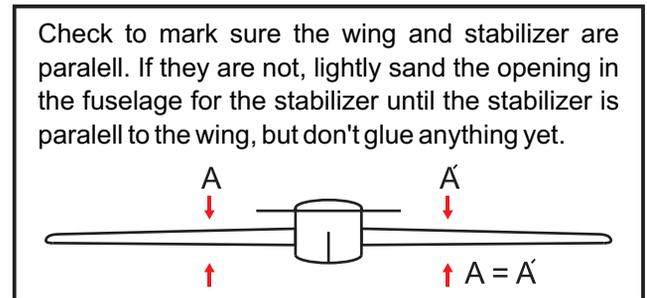
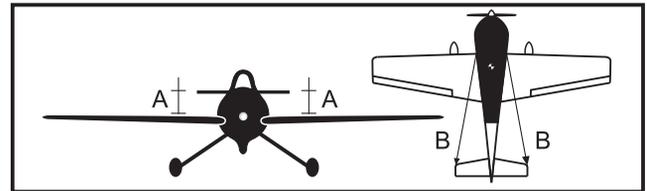


Check to make sure the wing and stabilizer are parallel. If they are not, lightly sand the opening in the fuselage for the stabilizer until the stabilizer is parallel to the wing, but don't glue anything yet.

5) With the horizontal stabilizer correctly aligned. Apply a thin CA layer to the top and bottom of the stabilizer in the fuselage.


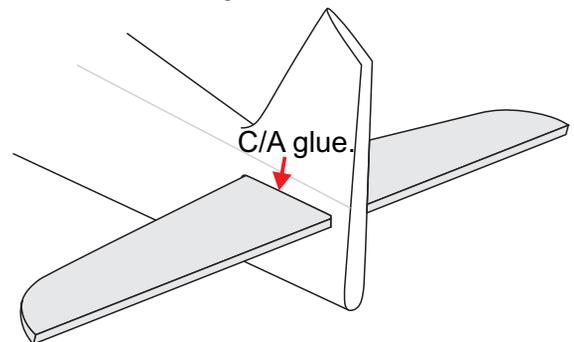


6) Hinges for Elevator are glued the same way as the aileron before (see page 4).

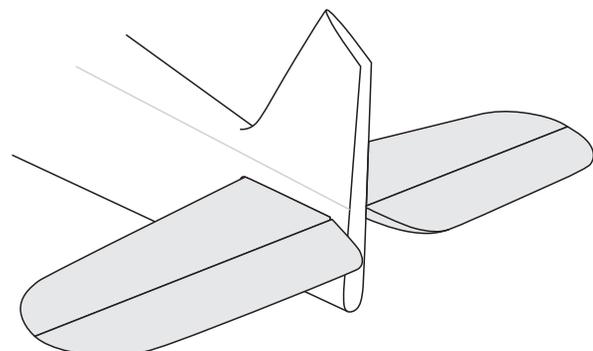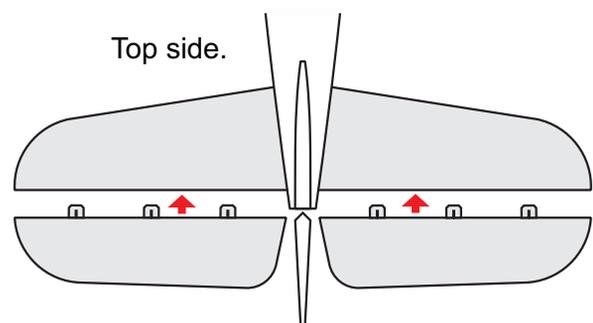


ELEVATOR CONTROL HORN AND PUSHROD INSTALLATION

Control horn and linkages for Elevator are installed the same way as the ailerons before (see page 5).

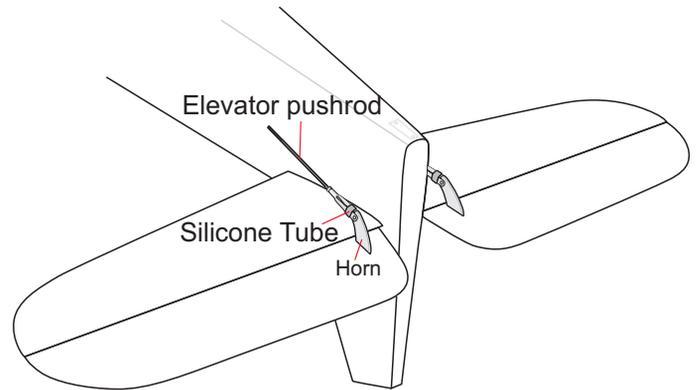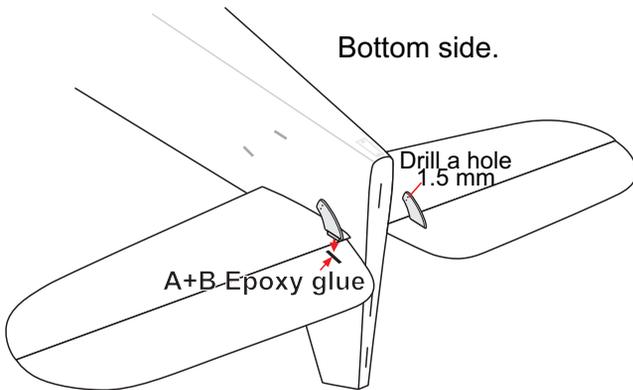


1) Using pliers, carefully make a 90 degree bend down at the mark made. Cut off the excess wire, leaving about 6mm beyond the bend.

2) Insert the 90 degree bend down through the hole in the servo arm. Install one nylon snap keeper over the wire to secure it to the arm. Install the servo arm retaining screw.

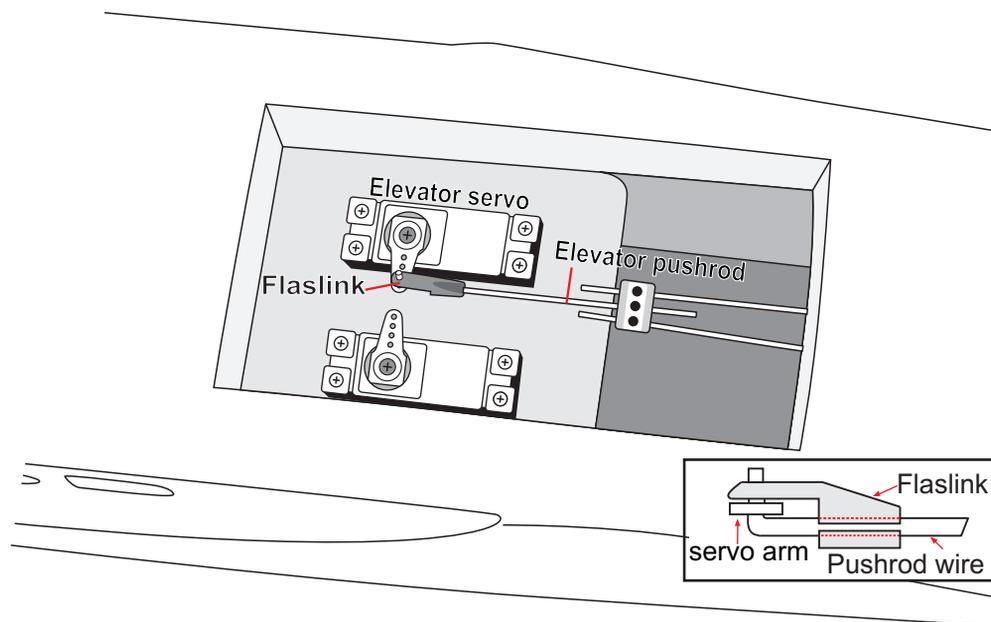



8. RUDDER INSTALLATION

Hinges for Rudder are glued the same way as the aileron before (see page 4).




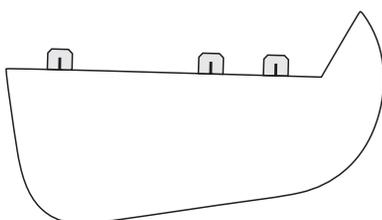


M2	1
2mm Nut	1
800mm Push rod	1
Flaslink	1
Horn	1

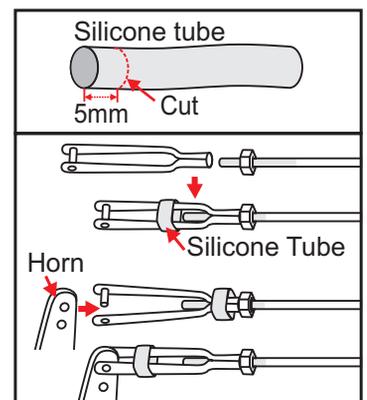

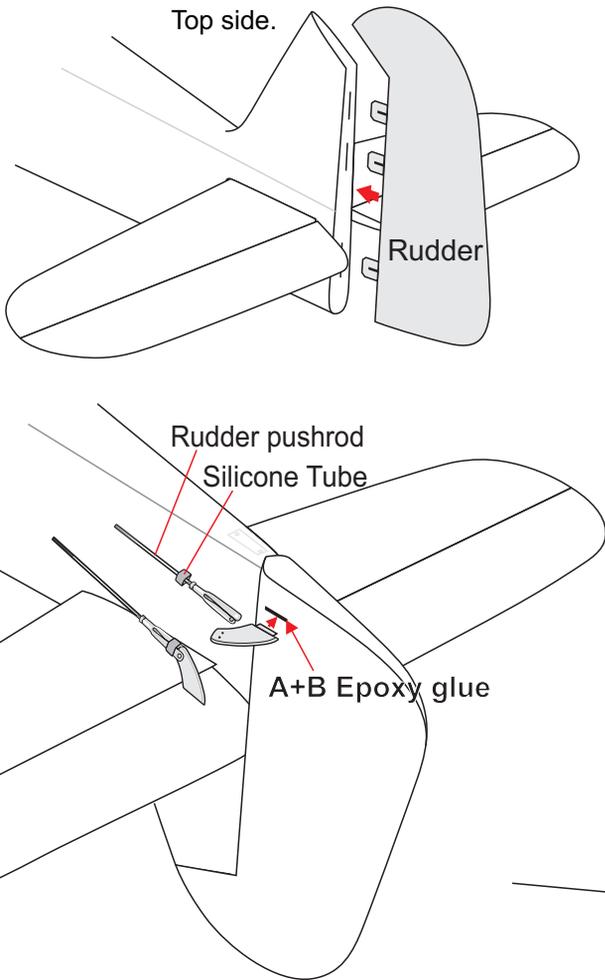


Control horn and linkages for Rudder are installed the same way as the Elevator before (see page 10).

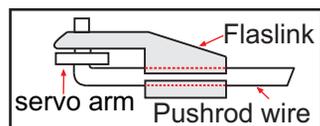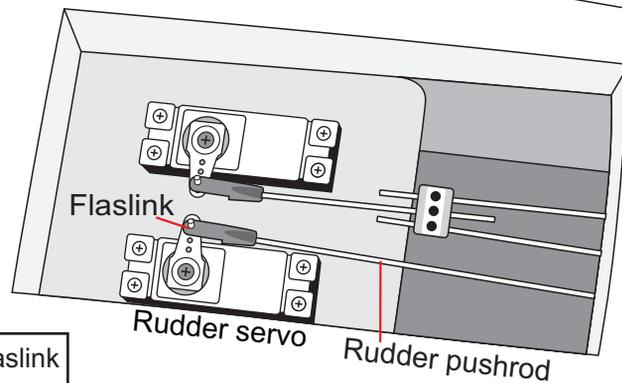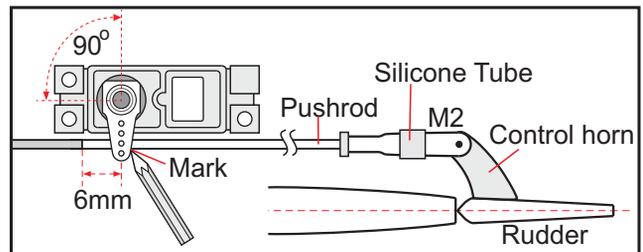
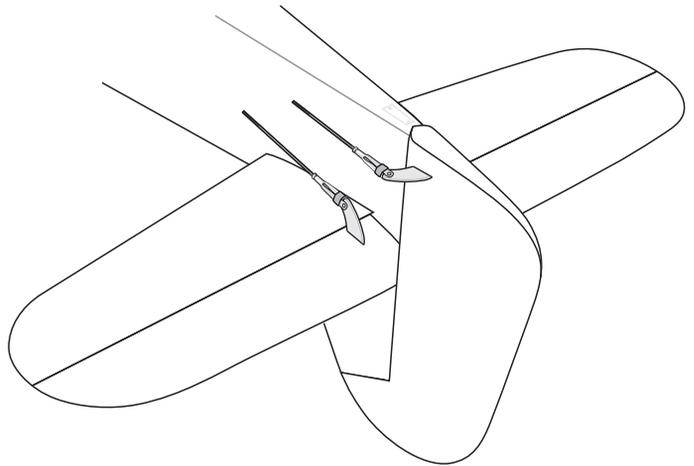


9. INSTALLING MAIN GEAR


4x15mm Cap Screw ----- 4	5mm Washer ----- 2
5x40mm Cap Screw ----- 2	5mm Washer ----- 2
4mm Washer ----- 4	5mm Nut ----- 4
4mm Spring Washer ----- 4	----- 2
	Collar -- 2

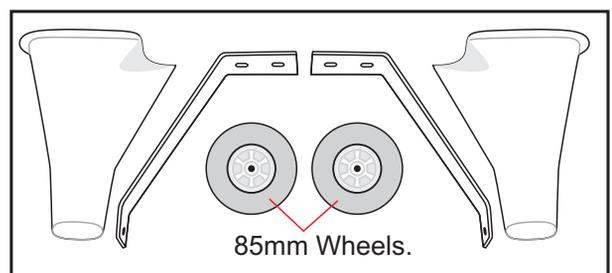

Secure the gear to the fuselage.

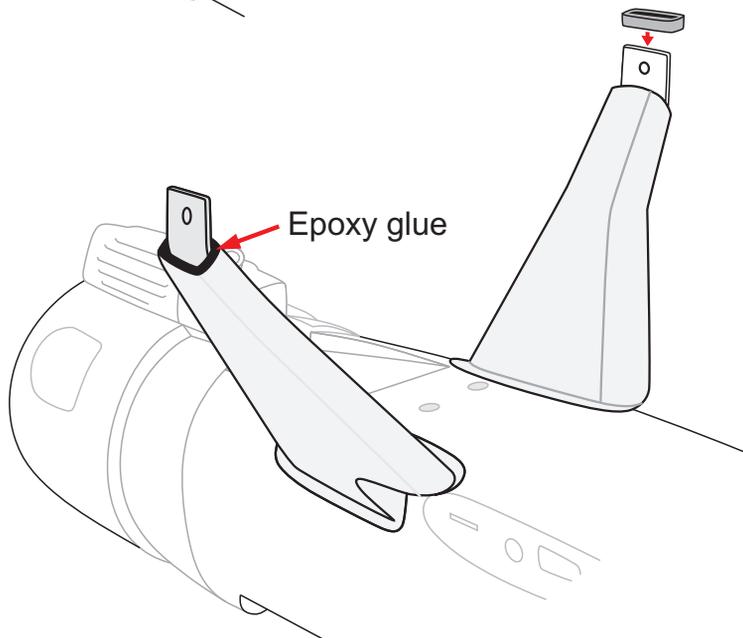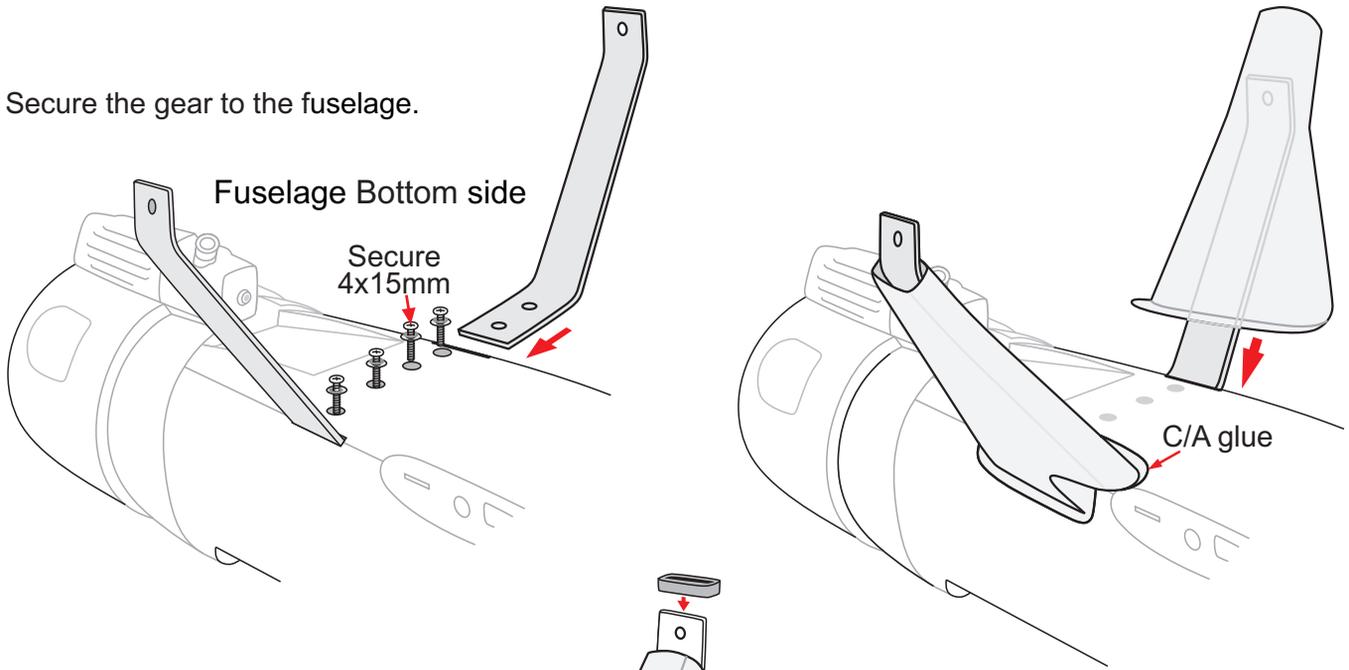


Install and secure the wheel.

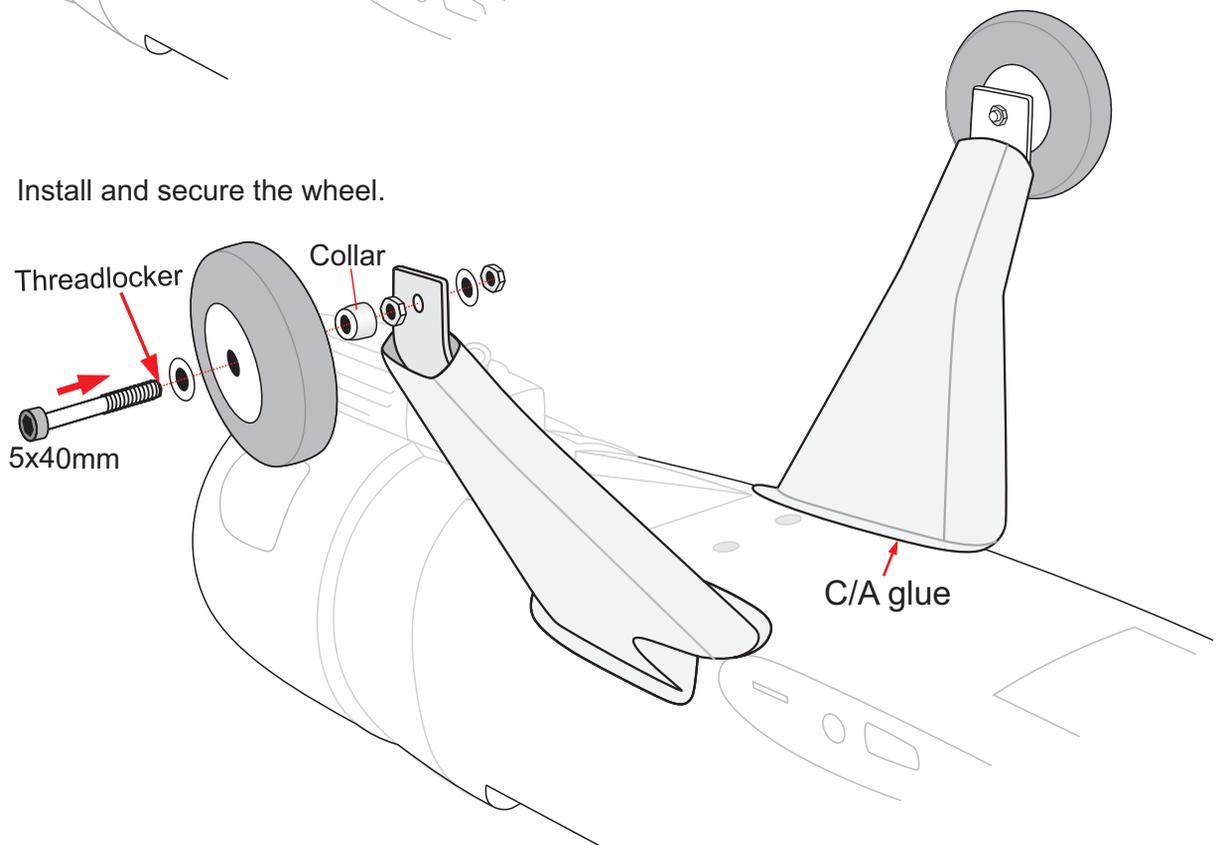





10. MOUNTING THE TAIL WHEEL BRACKET

- 3x12mm Screw  --- 2
- 3mm Collar  ---- 2
-  ----- 2


Set the tail wheel assembly in place on the plywood plate. The pivot point of the tail wheel wire should be even with the rudder hinge line and the tail wheel bracket should be centered on the plywood plate.

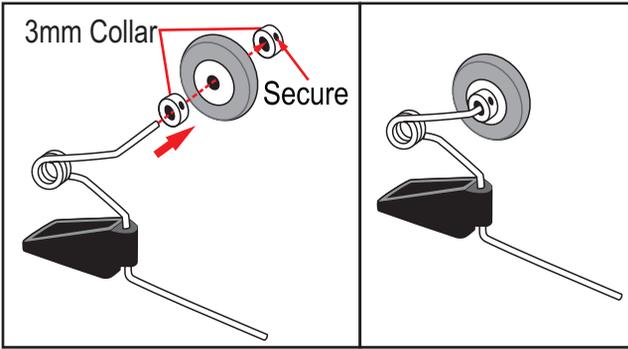

Mark the locations of the two mounting screws. Remove the tail wheel bracket and drill 2.5mm pilot holes at the locations marked.

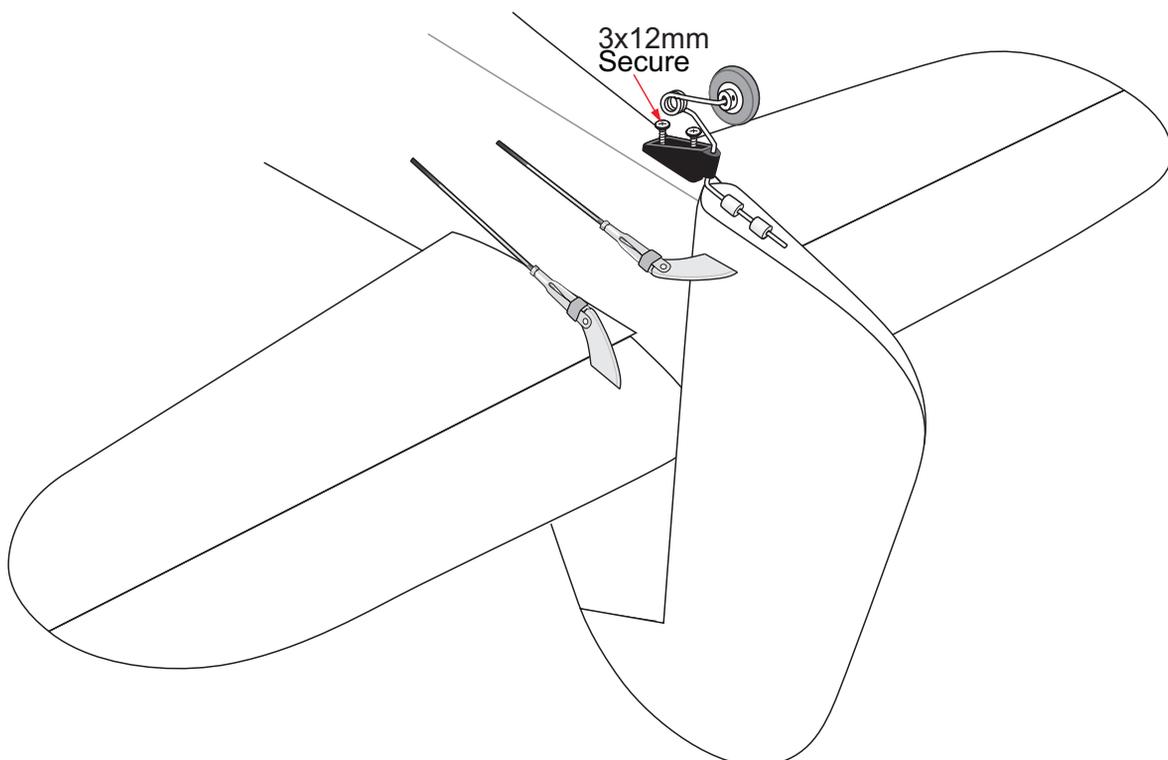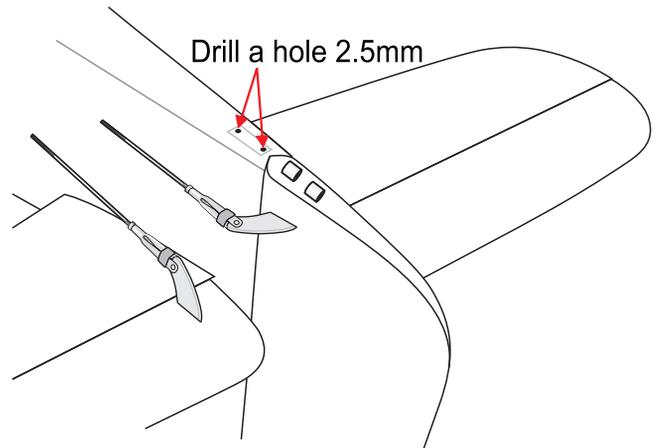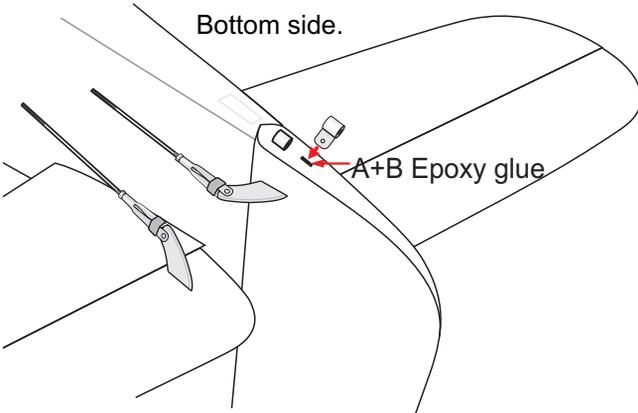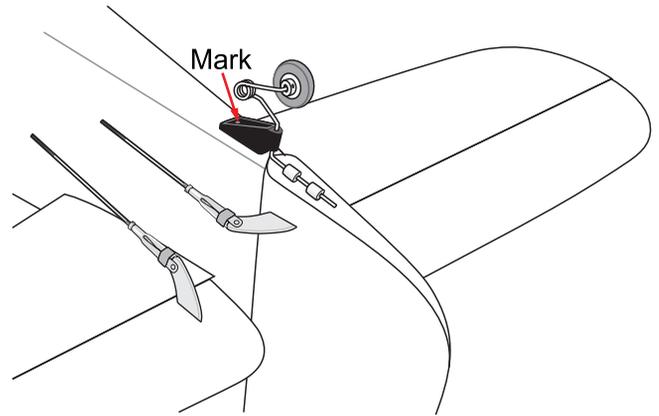


11. INSTALLING PLASTIC BOMB FUSELAGE


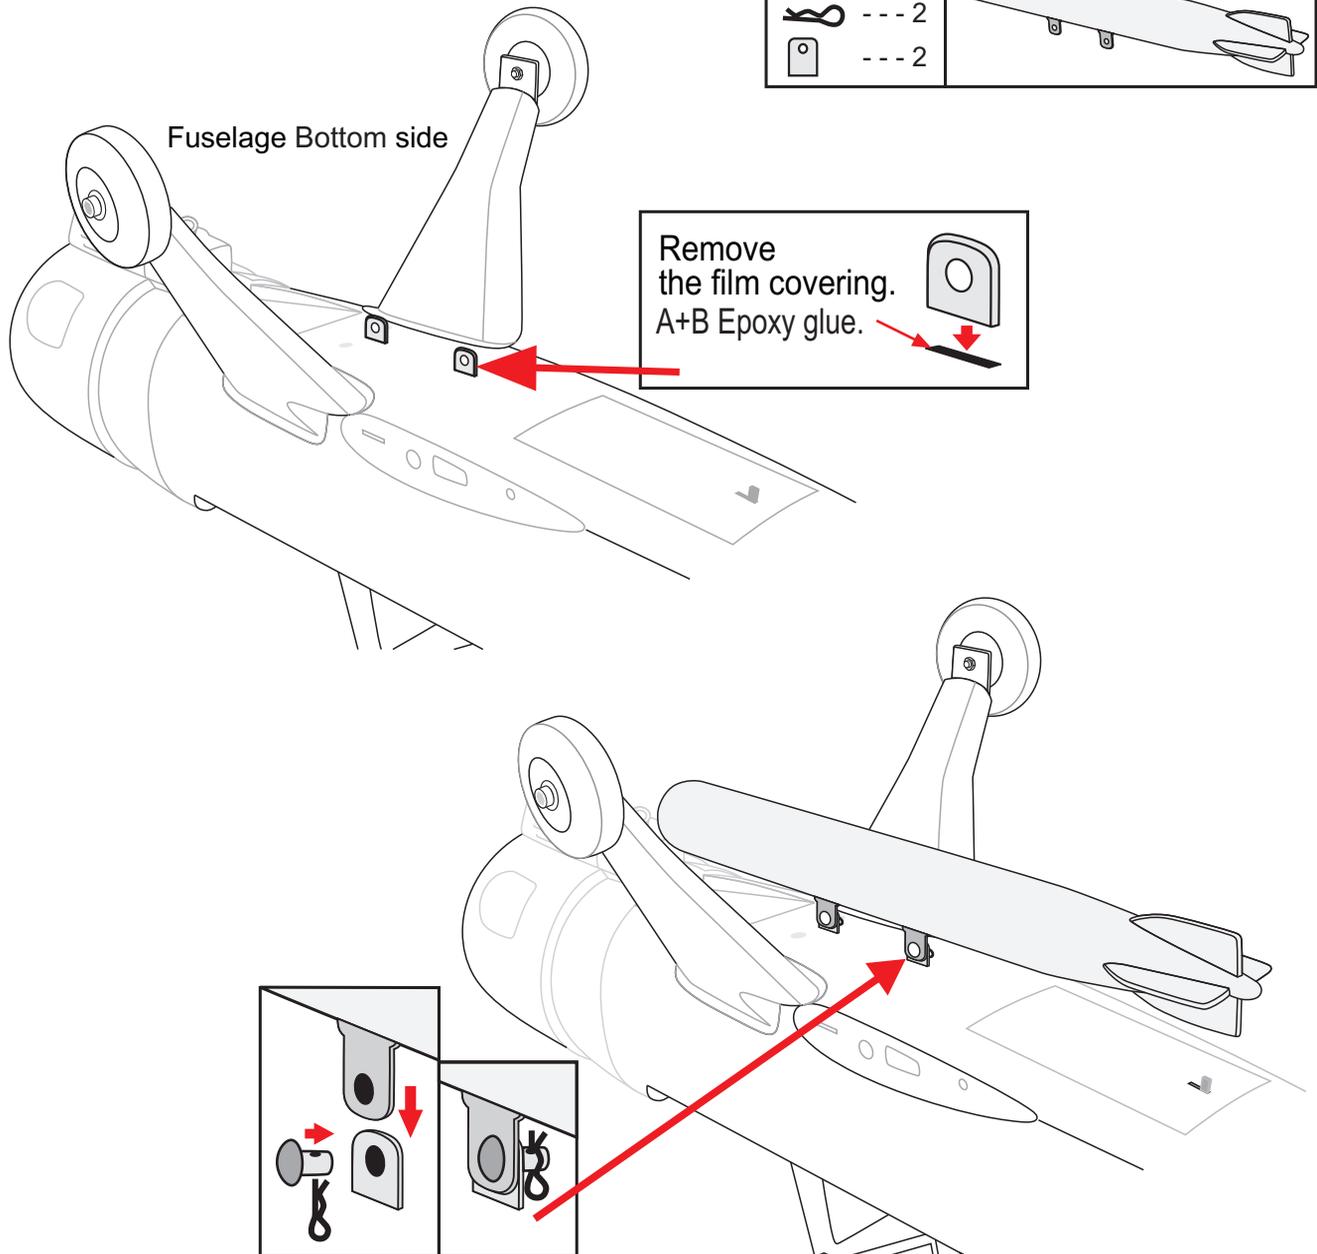


12. INSTALLING THE SWITCH, RECEIVER AND BATTERY


- 1) Cut out the switch hole using a modeling knife. Use a 2mm drill bit and drill out the two mounting holes through the fuselage side.
- 2) Secure the switch in place using the two machine screws provided with the radio system.
- 3) Plug the servo leads and the switch lead into the receiver. You may want to plug an aileron extension into the receiver to make plugging in the aileron servo lead easier when you are installing the wing. Plug the battery pack lead into the switch.
- 4) Wrap the receiver and battery pack in the protective foam to protect them from vibration. Use a rubber band or masking tape to hold the foam in place.
- 5) Position the battery pack and receiver behind the fuel tank. Use two tie wraps to hold the battery and receiver securely in place as pictures below.
Do not permanently secure the receiver and battery until after balancing the model.
- 6) Using a 2mm drill bit, drill a hole through the side of the fuselage, near the receiver, for the antenna to exit.

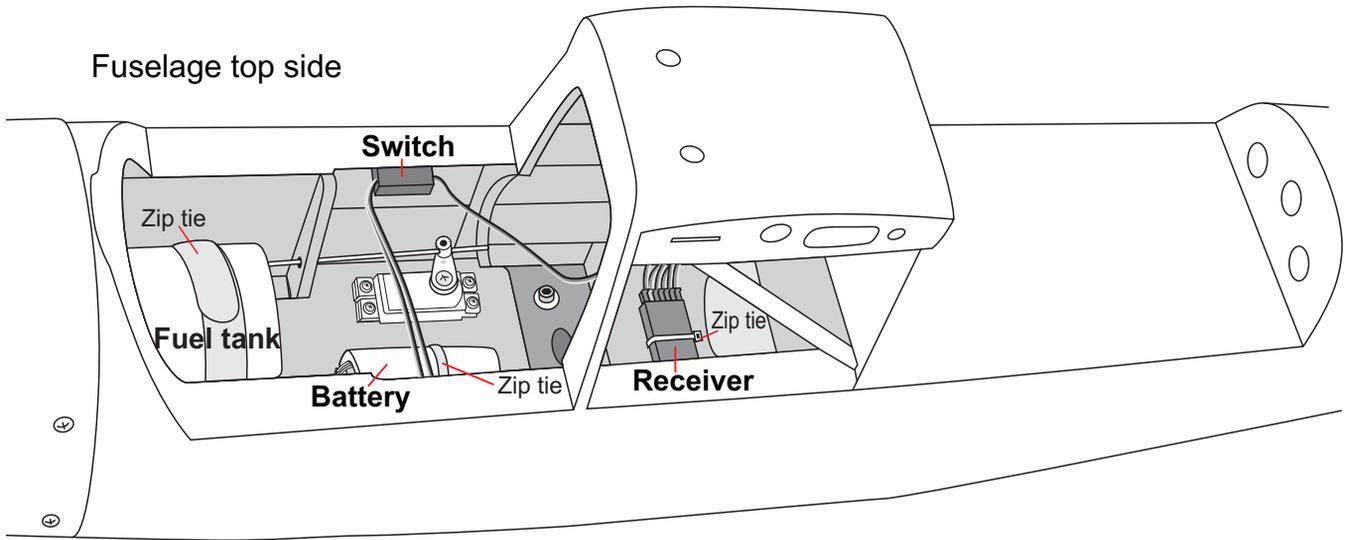



13. INSTALLING COCKPIT FUSELAGE

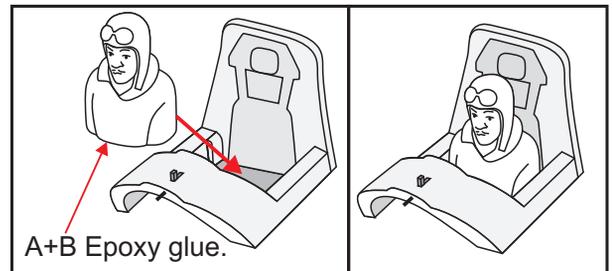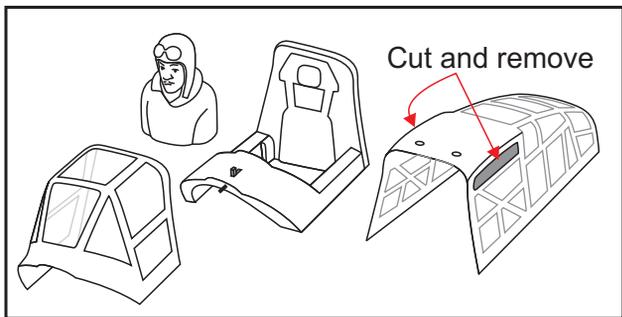



Position the canopy so the rear frame on the canopy is aligned with the rear edge of the cockpit opening. Use canopy glue to secure the canopy to the canopy hatch. Use low-tack tape to hold the canopy in position until the glue fully cures. Wrap the tape completely around the canopy hatch.

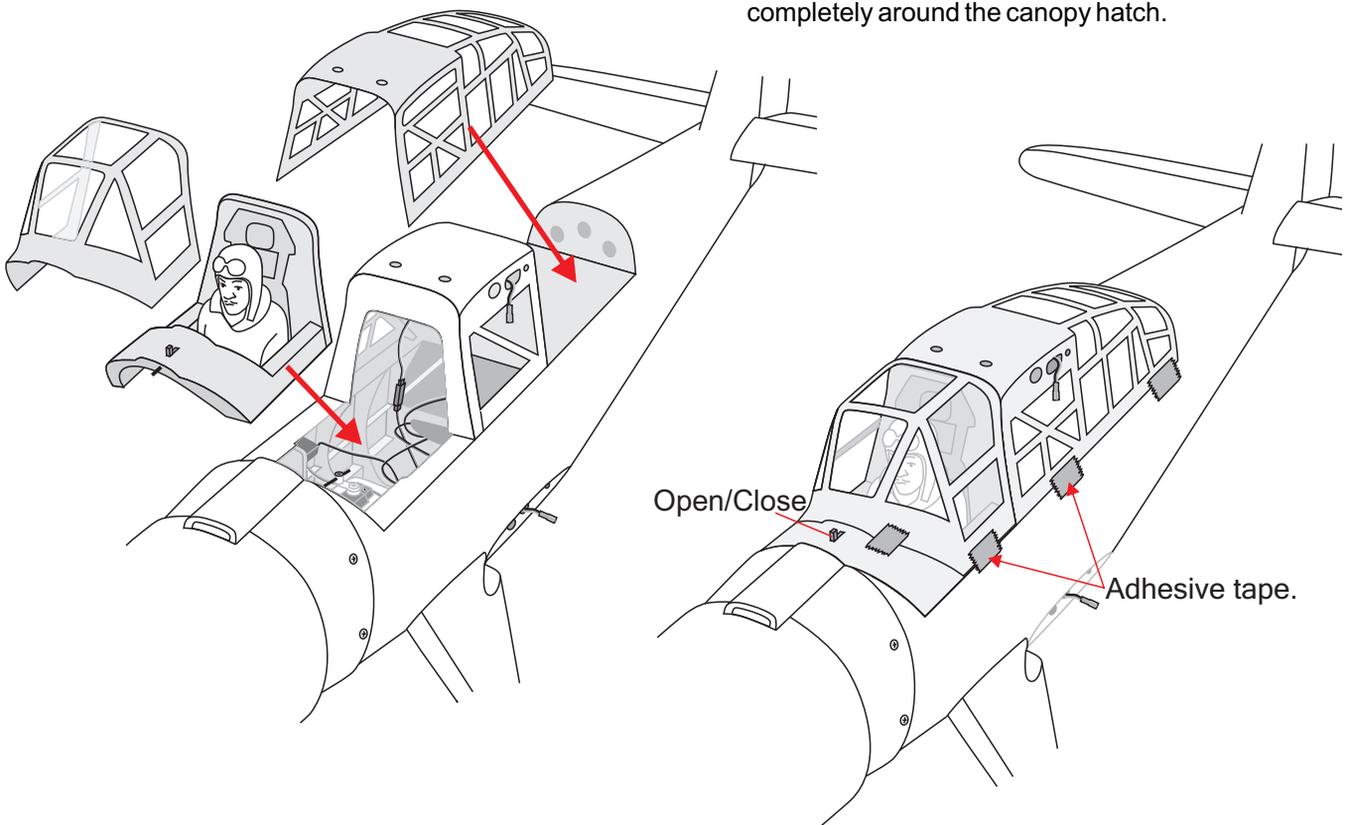

14. WING ATTACHMENT, WING STRUT

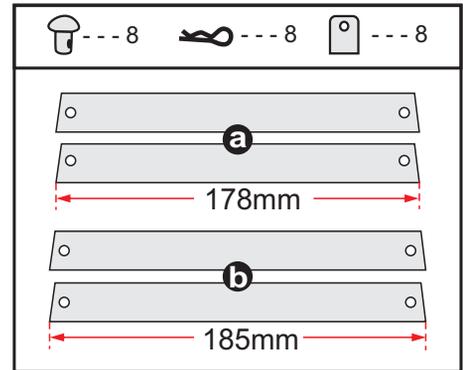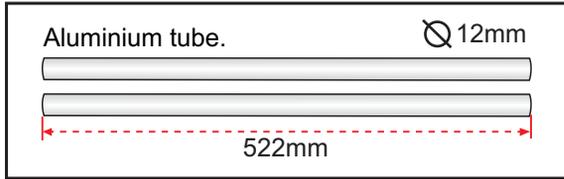




Remove the film covering.
A+B Epoxy glue.

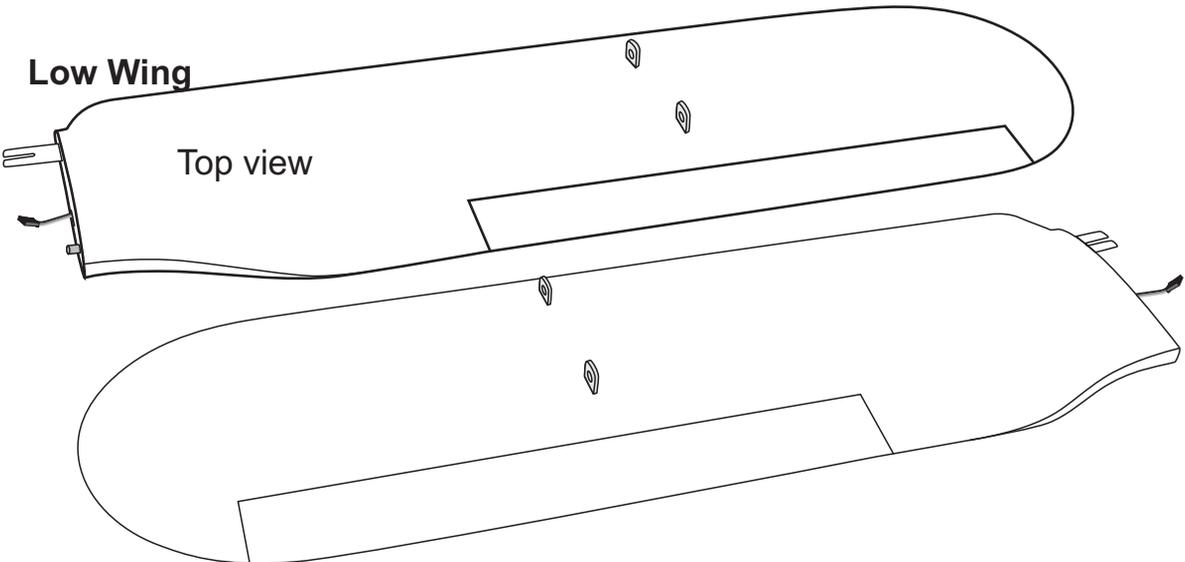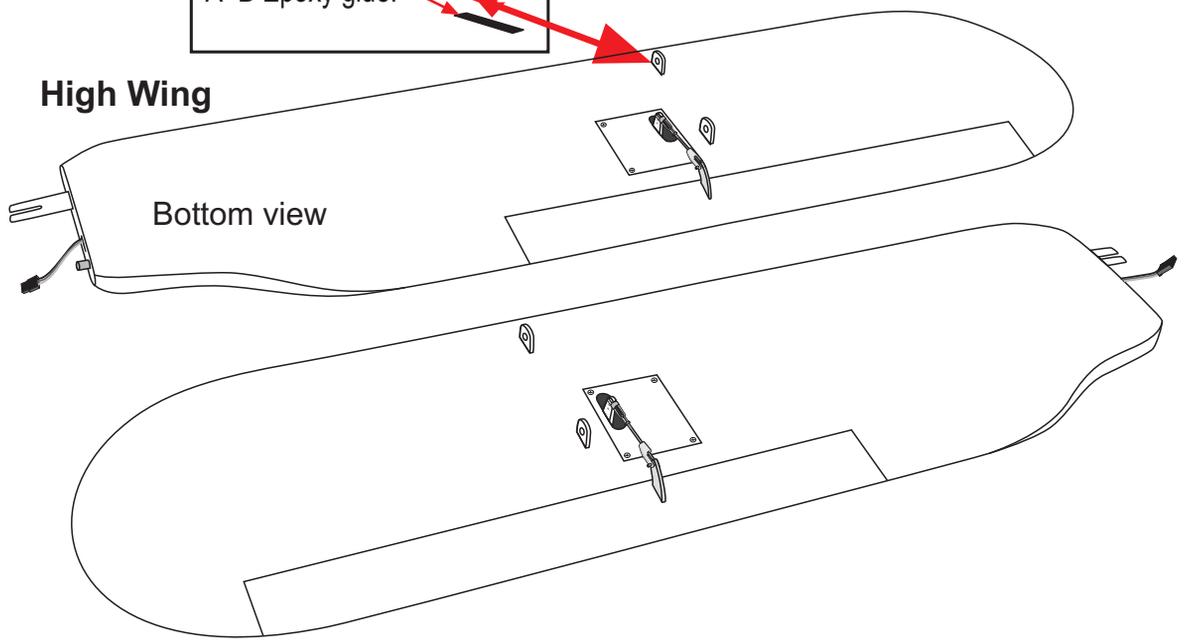


*** Test fit the aluminium tube dihedral brace into each wing haft. The brace should slide in easily. If not, use 220 grit sand around the edges and ends of the brace until it fits properly.




Attach the aluminium tube into the fuselage.

Insert the wing panel as pictures below.

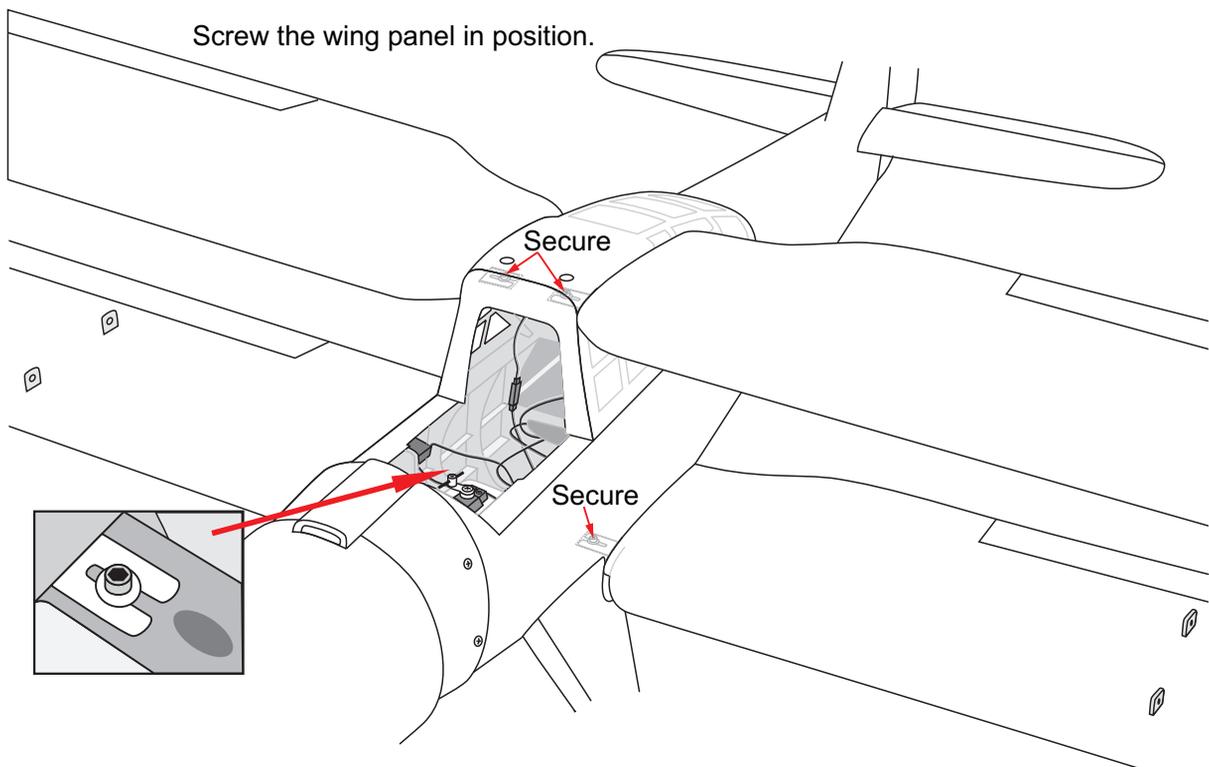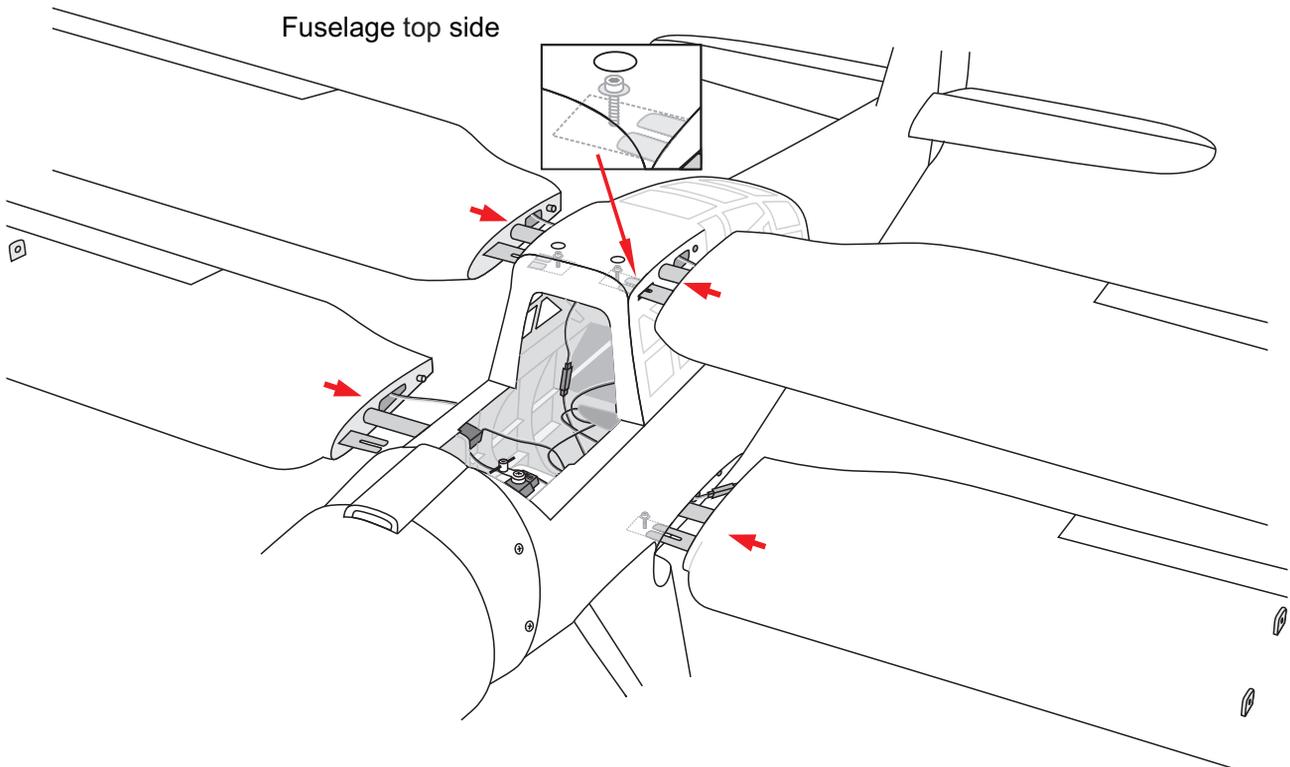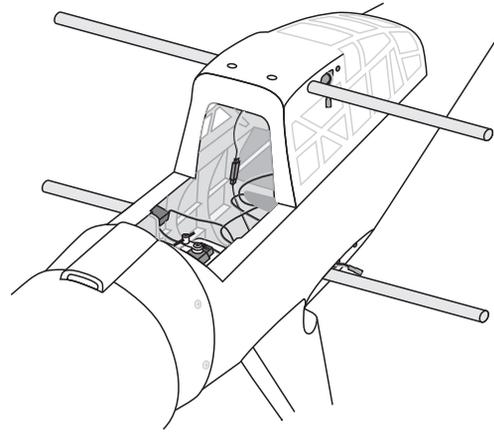

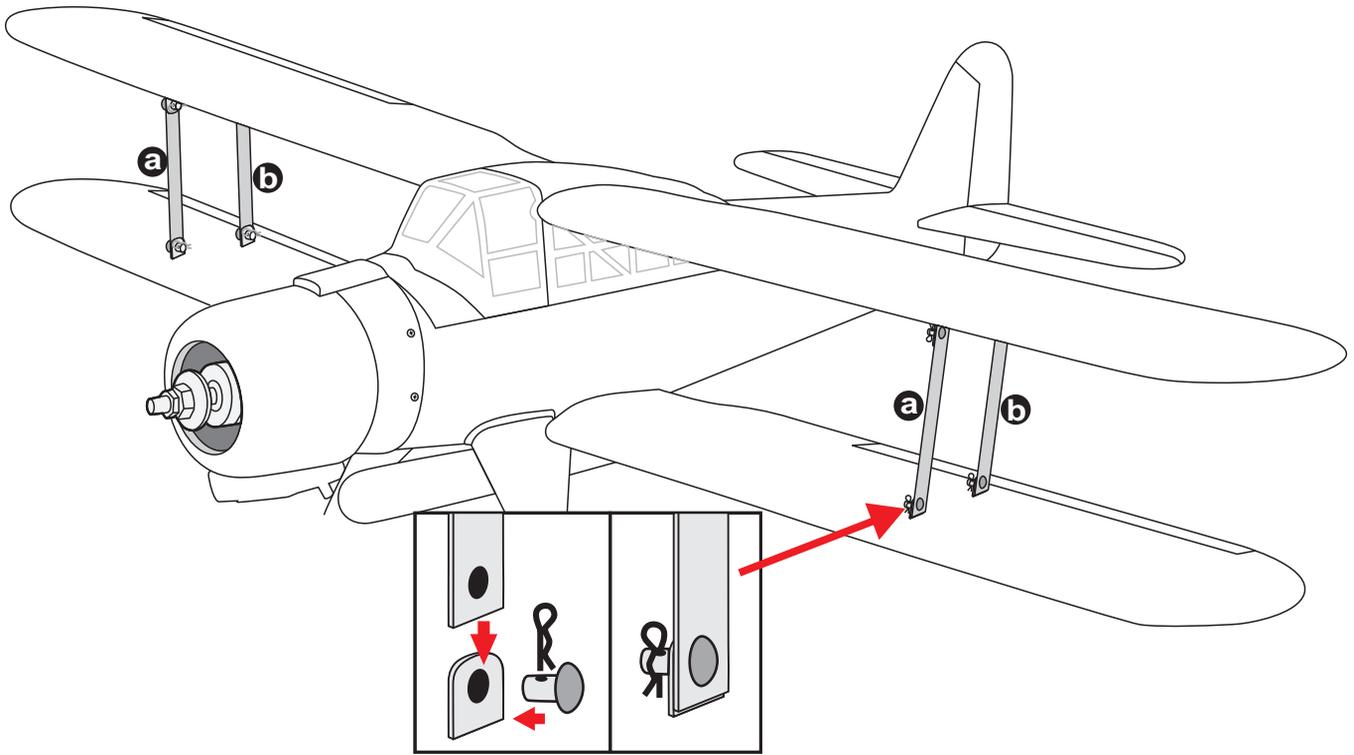

15. INSTALLING THE SPINNER, PROPELLER

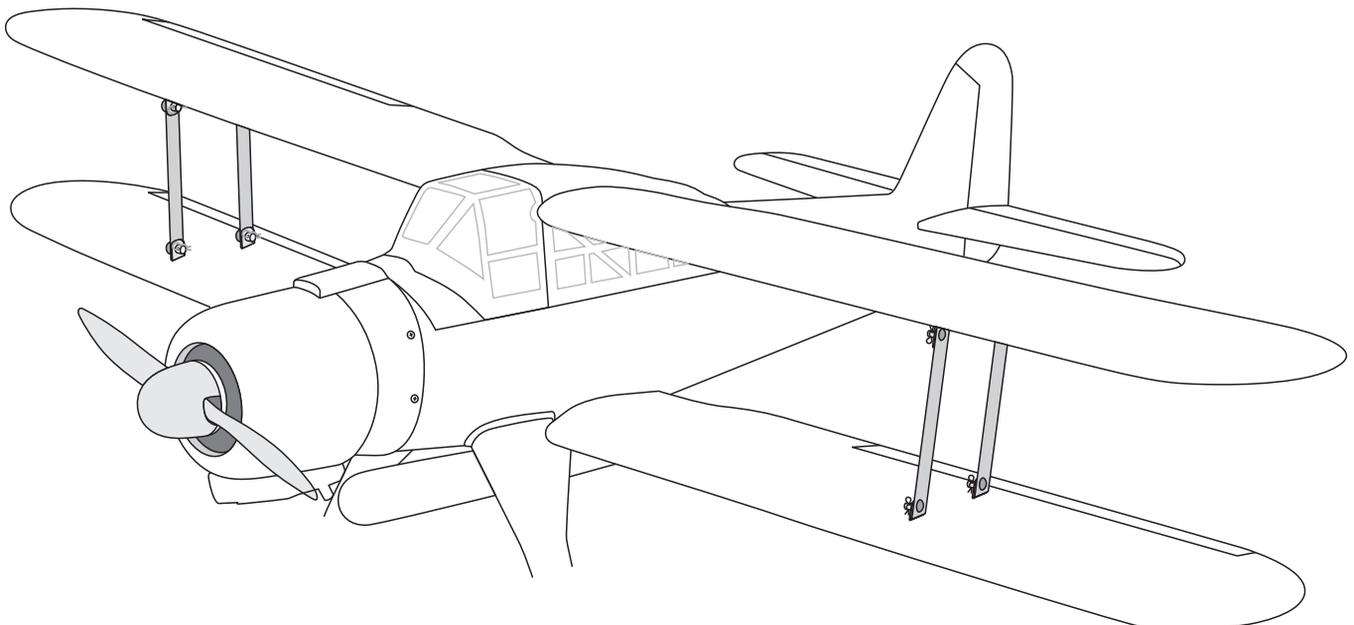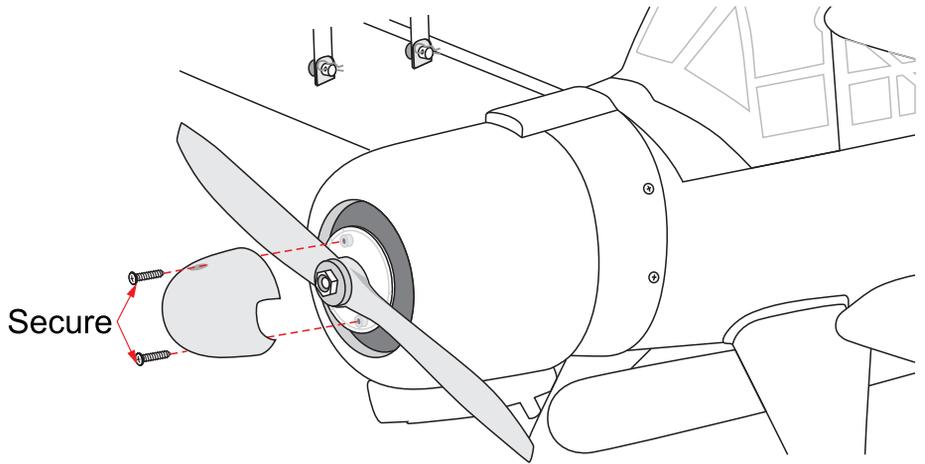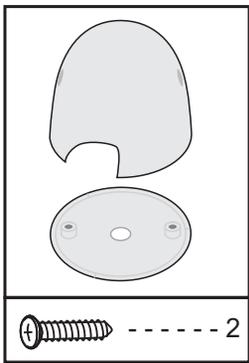

BALANCING

1) It is critical that your airplane be balanced correctly. Improper balance will cause your plane to lose control and crash.

THE CENTER OF GRAVITY IS LOCATED **70MM** BACK FROM THE LEADING EDGE OF THE WING.

2) Mount the wing to the fuselage. Using a couple of pieces of masking tape, place them on the top side of the wing **70mm** back from the leading edge, at the fuselage sides.


3) Turn the airplane upside down. Place your fingers on the masking tape and carefully lift the plane.

Accurately mark the balance point on the top of the wing on both sides of the fuselage. The balance point is located **70mm** back from the leading edge. This is the balance point at which your model should balance for your first flights. Later, you may wish to experiment by shifting the balance up to 10mm forward or back to change the flying characteristics. Moving the balance forward may improve the smoothness and arrow-like tracking, but it may then require more speed for take off and make it more difficult to slow down for landing. Moving the balance aft makes the model more agile with a lighter and snappier "feel". In any case, please start at the location we recommend.

With the wing attached to the fuselage, all parts of the model installed (ready to fly), and empty fuel tanks, hold the model at the marked balance point with the stabilizer level.

Lift the model. If the tail drops when you lift, the model is "tail heavy" and you must add weight* to the nose. If the nose drops, it is "nose heavy" and you must add weight* to the tail to balance.

*If possible, first attempt to balance the model by changing the position of the receiver battery and receiver. If you are unable to obtain good balance by doing so, then it will be necessary to add weight to the nose or tail to achieve the proper balance point.

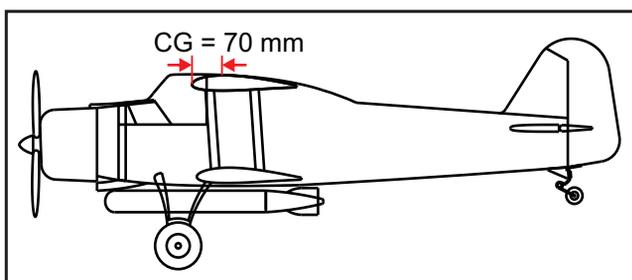

CONTROL THROWS

1) We highly recommend setting up a plane using the control throws listed.

2) The control throws should be measured at the widest point of each control surface.

3) Check to be sure the control surfaces move in the correct directions.

Control throw Ailerons:

Low: 10 mm up / down.

High: 12 mm up / down.

Control throw Elevators:


Low: 8 mm up / down.

High: 10 mm up / down.

Control throw Rudder:

Low: 25 mm left / right.

High: 30 mm left / right.

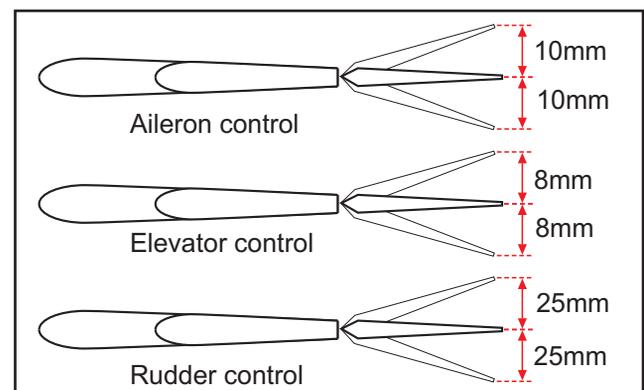

PRE-FLIGHT CHECK

1) Completely charge your transmitter and receiver batteries before your first day of flying.

2) Check every bolt and every glue joint in your plane to ensure that everything is tight and well bonded.

3) Double check the balance of the airplane.


4) Check the control surface.

5) Check the receiver antenna. It should be fully extended and not coiled up inside the fuselage. Check the receiver antenna. It should be fully extended and not coiled up inside the fuselage.


6) Properly balance the propeller.

We wish you many safe and enjoyable flights with your FAIREY ALBACORE


I/C FLINGT WARNINGS

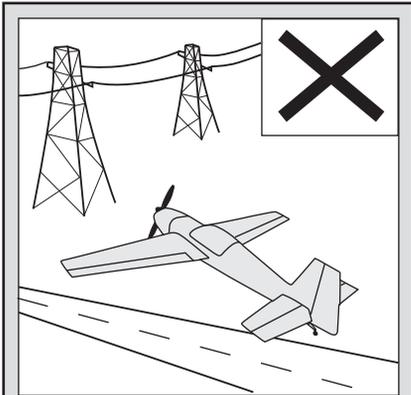


NEVER fly near power lines, aerials or other dangerous areas including airports, motorways etc.

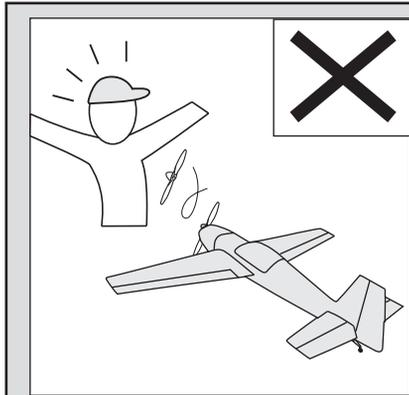


ALWAYS adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.

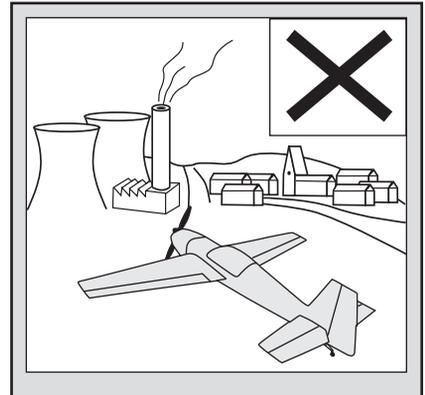


Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc. **NEVER** fly your aircraft close to people or built up areas.

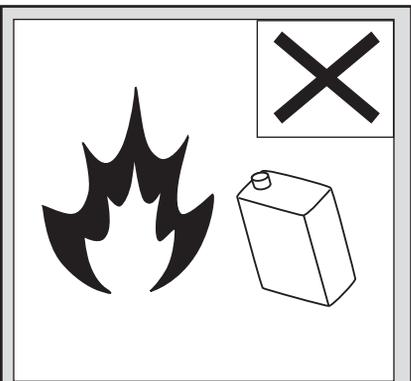


DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

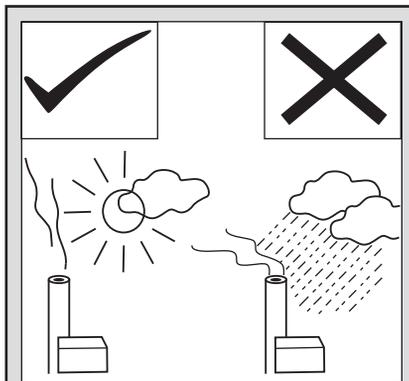

NEVER fly in wet conditions or on windy or stormy days.

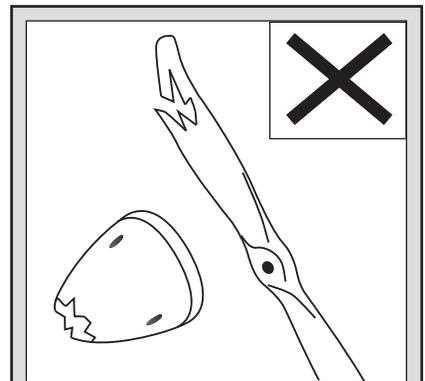


NEVER use damaged or deformed propellers or spinners.

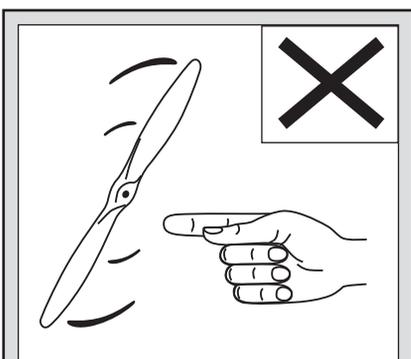

THE PROPELLER IS DANGEROUS.

Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at **ALL** times.

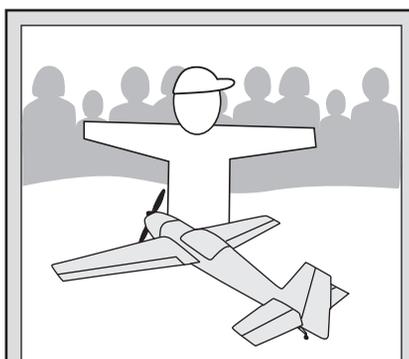

Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.