IRF-SHU

Instruction Manual for FrSky STK

Overview



S.Port 1 (upper) – Monitor, receive and set the telemetry data for S6R (with DIP switch to the upper side) S.Port 2 (down) - Upgrade S.Port products (with DIP switch to the down side)

How to upgrade S.Port products

Driver: http://www.frsky-rc.com/download/view.php?sort=Tool&down=160&file=Driver-Windows XP/7/8/Vista

FrSky_update_Sport.exe: http://www.frsky-rc.com/download/view.php?sort=Tool&down=115&file=Upgrade Lite-S.Port Telemetry

Steps: Put the DIP switch to the down side \rightarrow connect the USB port of STK to the USB port of PC \rightarrow run "frsky_update_Sport.exe", match the COM port number to the one assigned by PC. Click "File" button and select FW version \rightarrow connect the 3-wire S.Port cable to the S.Port 2 of STK and S.Port of upgraded product \rightarrow After "device found, please click Download", then click the "Download" button to start the upgrade \rightarrow Exit the process by clicking "End" button after "Firmware is updated".

Refer to S6R manual from FrSky website download section for how to monitor, receive and set the telemetry data: http://www.frsky-rc.com/download/index.php?sort=&cate_id=0&pro_id=167