

Operation

Link: Transmitter enter into link status (Linkage Setting)→(Link), Then power up the receiver.


Mode Select: Set at the transmitter menu of (Linkage Setting) →(W.BUS/PPM)

LED Status List

LED	Action	Status
Green	Never	PWM normal work mode(Port 4)
Blue	Never	PPM normal work mode(Port 4)
Red	Never	No signal
Red	Flash slowly	Low voltage

Interface definition

Red wire connect to the positive pole
The resistor connect to the negative pole

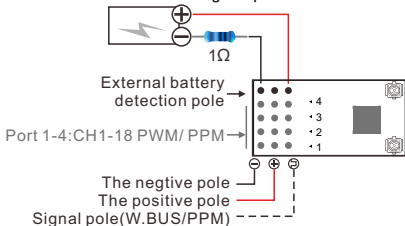

Parameter performance

Model: RF204W

Band: 2.4GHz

Voltage: 3.8V~6.5V

Current: 80mA

Resolution ratio: Full channels 4096

PWM: 4 channels(customizable channel)

PPM: 4 channels

Two-way transmission: Support

Fail-safe: Support

180/270° Servo: Support

External voltage detection: DC 0-36V

Dimension: 36*20*12mm

Weight: 2.7g