

FR \ CH		CH							
		1	2	3	4	5	6	7	8
FR	A	5865 MHz	5845 MHz	5825 MHz	5805 MHz	5785 MHz	5765 MHz	5745 MHz	5725 MHz
	R	5658 MHz	5695 MHz	5732 MHz	5769 MHz	5806 MHz	5843 MHz	5880 MHz	5917 MHz
	E	5705 MHz	5685 MHz	5665 MHz	5645 MHz	5885 MHz	5905 MHz	5925 MHz	5945 MHz
	F	5740 MHz	5760 MHz	5780 MHz	5800 MHz	5820 MHz	5840 MHz	5860 MHz	5880 MHz













