






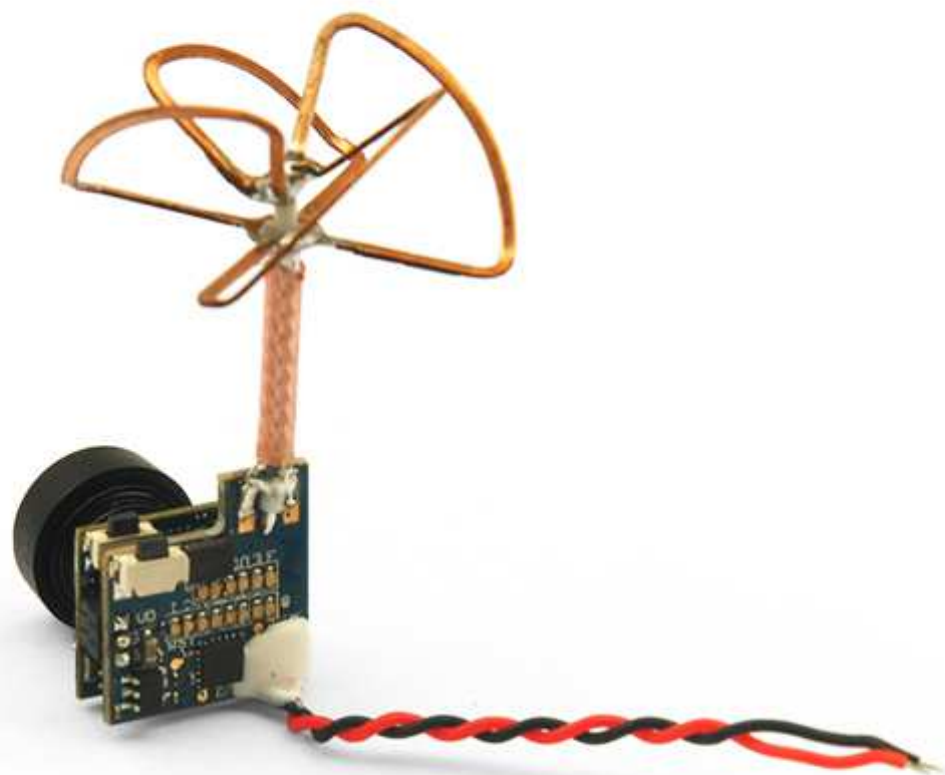

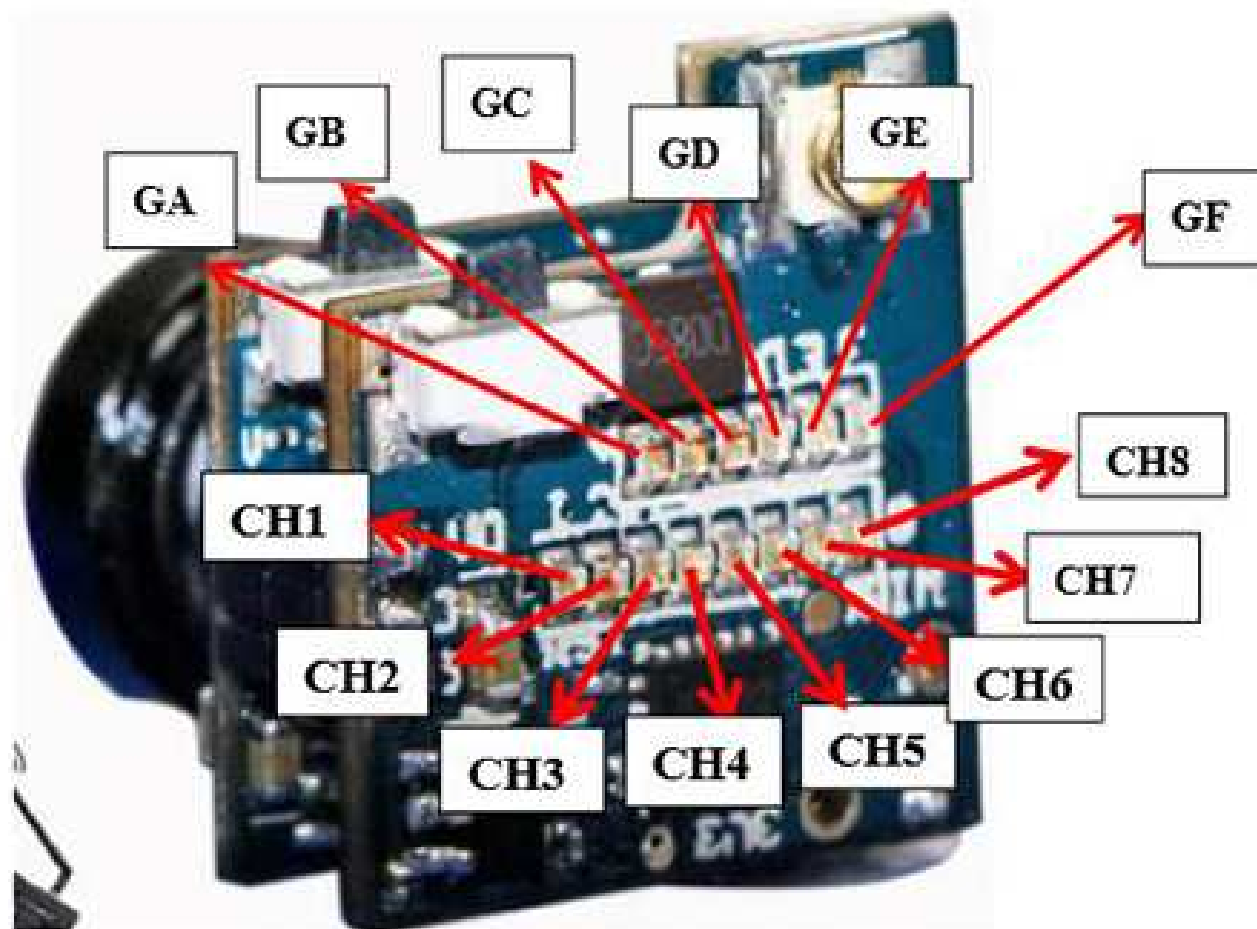

长按 2S N/P 制切、短按
倒像 (NTSC/PAL Switch
still touch up 2S; Short
touch flip switch)

长按 2S 选择频率
组, 短按切换频率
(Frequency group
A~F selected still
touch up to
2S; Channel ch1~ch8
selected with short
touch.

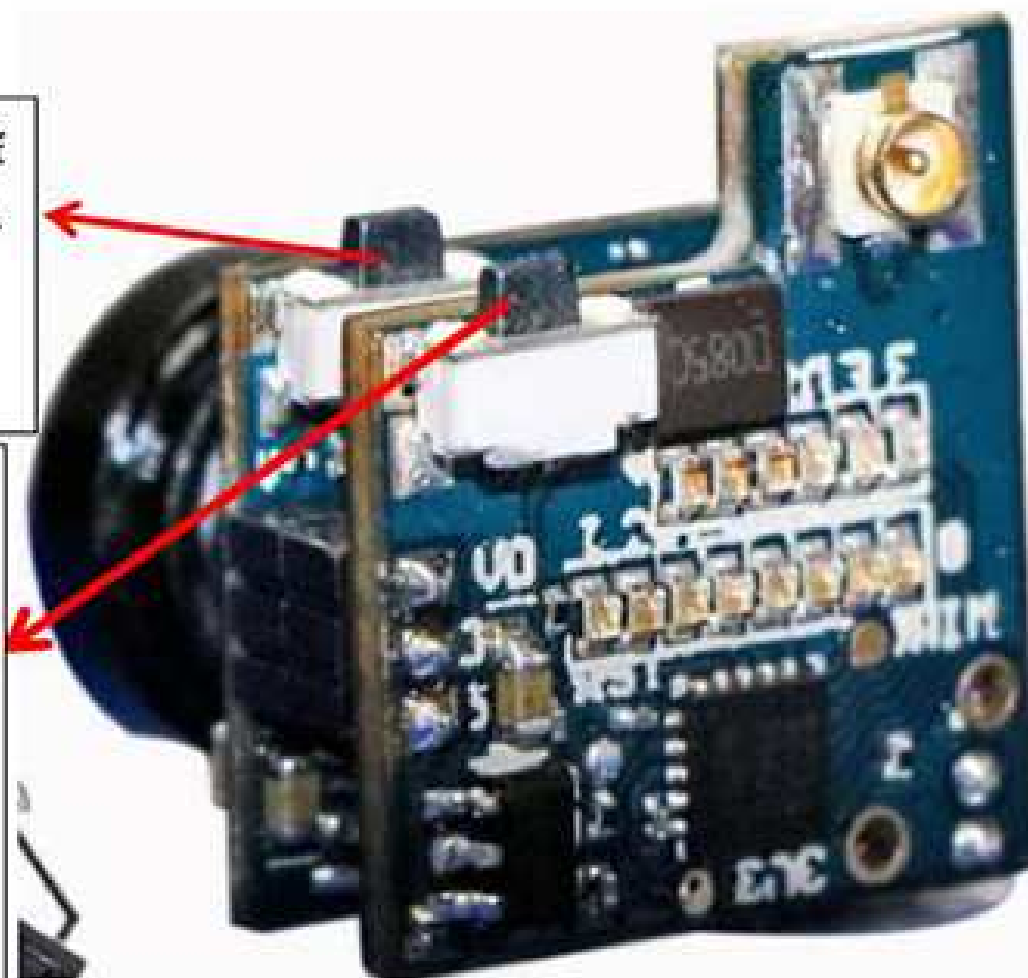

项目 (Item)	规格 (SPEC.)
频段 (Frequency band)	5362~5945MHz
频道数 (Channel customer)	48
调制类型 (Modulation type)	FM
选频方式 (Channel SEL.)	Touch Switch
频道指示/频率组指示 (Channel Indicate)	CH1~CH8 Channel indication with 8LEDS and A~F frequency group Indicate with 6LEDS
发射功率 (Transmit power)	13±1dBm
频率控制 (Frequency control)	PLL
最高谐波 (All harmonic)	Max -50dBm
频率稳定度 (Frequency Stability)	±100KHz (Typ.)
频率精度 (Frequency precision)	±200KHz (Typ.)
频道载波功率差别 (Channel Carrier error)	1dB
天线口阻抗 (Antenna Port)	50 Ω
摄像头制式 (Input format)	NTSC/PAL
图像解析度 (SENSOR)	PAL:720X540/NTSC:640X480 1/4"
镜头角度 (LENS ANGEL)	H:120° /V:100°
外部接口 (Base-band interface)	(P1.27*2)
功耗 (Power consumption)	200~215MA@5V DCIN
工作电压范围 (Supply Voltage)	2.9-5.5v
工作温度 (Operating Temperature)	-10℃~+60℃
外形尺寸 (Profile dimension)	14.5mmX12.2mm+14.5mmX12mm